

5. Turning off & automatic shutdown:

Hold the On/Off button until the status light goes out. The HYUNDAI HD-MC1010 is now turned off.

The HYUNDAI MC1010 will shut down automatically in the following circumstances:

- a. If the battery is low. The HYUNDAI HD-MC1010 mini video camera will stop the current recording and save it automatically.
- b. If there is not enough storage space on the memory card to continue. The HYUNDAI HD-MC1010 will then save the recording automatically and shut down.
- c. If the camera is in "Standby Mode". The camera will shut down automatically after a period of inactivity longer than approximately 45 seconds.

6. Playback

To play back your recordings, connect the camera to your computer using the USB cable included. The camera will be recognised automatically through Plug & Play and the directory will appear. This is where all your films and photos have been saved.

7. Faults

Should the camera develop a fault, e.g. the light is continually illuminated and the camera will not turn off, remove the memory card and press the "Reset" button on the left side of the casing with a paperclip or needle. Replace the Micro SD card and turn the camera on again. The "Reset" button is located between the USB output and the memory card slot.

You can find more information www.my-hyundai.de

HYUNDAI