

## HYUNDAI HDMC1010 Mini videocamera

### Operating instructions

#### I Description of your Hyundai mini video camera

- Supports AVI Video Format.
- High Definition recordings/photos can also be taken in poor light conditions with 30 fps at 1280\*720
- Supports USB1.1 und USB2.0.,
- Memory card slot for a 32GB Micro SD card (maximum)

HYUNDAI



#### II Using your HYUNDAI mini video camera

##### 1. Charging the battery

Charge the battery fully before using the camera for the first time.

Connect the camera to your computer using the USB cable -

this will begin charging the battery.

Do not overcharge the battery - disconnect the camera from the computer after two hours.

The camera turns off automatically if the battery charge is too low. It will only turn on again after a complete charge.

#### II Using your HYUNDAI HDMC1010 mini video camera

##### 2. Setting the video function

Press the on/off button. The yellow light will illuminate and the camera is now in standby mode. Press the "Change mode" button. The yellow light will flash three times and go out.

Video recording will start from this moment. To stop video recording: press the "Change Mode" button again and the yellow light will illuminate. Video recording has now stopped. To start recording again

- follow the steps as described above. **Remember:**
- a. Make sure that the Micro SD card is inserted, otherwise the camera will automatically turn off after 15 seconds.
  - b. The maximum supported Micro SD card capacity is 32GB.
  - c. Saving data may take some time. Therefore do not press any button during this time or data may be lost.

##### 3. Photo function

Press the "On/Off" button. The yellow light will illuminate. The camera is now in start mode. Now press the "Change Mode" button briefly. The yellow light flashes to show that a photo has been taken. Press the button again to take another photo.

