

# **MB-6900**

# **USER MANUAL**

# Welcome

PLEASE READ THIS INFORMATION BEFORE USING THE PHONE TO MAKE A BETTER USE OF YOUR PHONE. WE ARE NOT RESPONSIBLE FOR ANY DAMAGE DUE TO YOUR MISUNDERSTANDING OF THIS INFORMATION AND MISACTING.

We are endeavoring to improve our products and services and we reserve all the rights to revise and change the description of this product and its software as well as this user's manual without obligation to notify any person of such revisions and changes.

This user's manual is for your better use of this phone not an approval of any accessories. All the pictures in this manual are for reference only. There may be slight difference between the appearance of phone and keys and contents of display used in this manual and those of your phone. Please refer to your phone for actuality. Some features introduced in this manual are network or subscription-dependent features. Please contact your service provider for confirmation.

# Catalog

<b>1 Hardware Configuration</b> .....	<b>6</b>
<b>2 Safety Information</b> .....	<b>7</b>
<b>3 Use and Care</b> .....	<b>10</b>
<b>4 Essential</b> .....	<b>11</b>
4.1 Power On/Off.....	11
4.2 SIM and Battery Installation.....	11
4.3 Battery Charging.....	11
4.4 Charge Battery via Charger.....	12
4.5 Charge Battery via Computer.....	13
4.6 Memory Card.....	13
4.7 Remove Memory Card.....	14
4.8 Format Memory Card.....	14
<b>5 Elementary Operation</b> .....	<b>15</b>
5.1 Calibrate when using for the first time.....	15
5.2 Screen Explanation.....	16
5.4 MB-6900 Touch Screen.....	18
5.5 Standby Key Lock Operation.....	19
5.6 Slot & Physical Keys.....	20
5.7 Visit Programs and Edit Icons.....	21
5.8 Adding Widgets.....	22
5.9 Synchronizing with Your Google Account.....	23
<b>6 Basic Function Settings</b> .....	<b>24</b>
6.1 Application Programs.....	24
6.2 Current Time & Date.....	24
6.3 Sound On or Off.....	25
6.4 Ring Tone.....	25
6.5 Silent Mode.....	25
6.6 Ring Tone.....	25
6.7 Animation.....	26
6.8 Wallpaper.....	26
6.9 Screen Brightness.....	26
6.10 Screen Lock.....	26

---

<b>7 Input Method &amp; Text Editing</b> .....	<b>29</b>
7.1 Change Input Method .....	29
7.2 Copy and Paste Text.....	30
<b>8 Call Function</b> .....	<b>31</b>
8.1 Dial and Receive Call .....	31
8.2 Answer a Call.....	31
8.3 Reject a Call.....	32
8.4 Dial International Call.....	32
8.5 Use Earphone.....	32
8.6 Voice Call.....	32
8.7 Call Forwarding .....	33
<b>9 Message</b> .....	<b>34</b>
9.1 SMS .....	34
9.2 MMS .....	34
9.3 View SMS/ MMS.....	34
<b>10 Mailbox</b> .....	<b>35</b>
10.1 Setup Email.....	35
10.2 Send Email .....	35
10.3 View Email.....	36
10.4 About Gmail.....	36
<b>11 Camera</b> .....	<b>37</b>
11.1 Take Pictures .....	37
11.2 Camcorder.....	37
<b>12 Music</b> .....	<b>39</b>
12.1 Play Music .....	39
12.2 Add Music Widget .....	40
<b>13 Gallery</b> .....	<b>41</b>
13.1 View Pictures .....	41
13.2 Contact Icon .....	41
13.3 Wallpaper .....	42
13.4 Share Pictures/Videos .....	42
<b>14 Contacts</b> .....	<b>43</b>
14.1 New Contact .....	43
14.2 View Contacts .....	43
14.3 Options of Contacts.....	44
<b>15 Calendar</b> .....	<b>45</b>

---

15.1 New Event.....	45
15.2 Calendar Alarm .....	45
<b>16 Browser .....</b>	<b>46</b>
<b>17 Bluetooth .....</b>	<b>48</b>
17.1 Activate Bluetooth .....	48
17.2 Use Bluetooth .....	48
<b>18 WLAN.....</b>	<b>50</b>
<b>19 Clock .....</b>	<b>51</b>
<b>20 Calculator .....</b>	<b>52</b>
<b>21 Navigation .....</b>	<b>53</b>
<b>22 FM Radio.....</b>	<b>54</b>
<b>23 Maps .....</b>	<b>55</b>

# 1 Hardware Configuration

Frequency	GSM:850/900/1800/1900 3G (WCDMA):900//1800/2100
3G	WCDMA
LCD	2.8'QVGA TFT
MCP	4+2 Gbit
TP	Electric Resistance TP(Single-point)
BT	Support
WiFi	Support
GPS	Support
G-Sensor	Support
Compass	Support
Ambient Light Sensor	Not Support
ATV	Support
FM	Support FM Broadcast
USB	Support
Camera(AF)	Front 0.3M and Back 2M(Without AF)
Camera flashlight	Support
Torch	Not Support
3.5mm Earphone	Support

## 2 Safety Information



Read this information before using your mobile device otherwise may result in personal injury or your device not complying with local laws.

### **Battery:**

If a conductive material such touches the exposed terminal, short circuit may occur resulting in property damage, bodily injury or burn. To avoid risk of leaking electricity, take care when handling a charged battery particularly when placing it inside your pocket, purse or other container with metal objects.

### **Keep your mobile device from water:**

Keep your mobile device dry.

### **Use while driving**

Always obey the laws and regulations on the use of mobile devices in the area where you drive. Pay full attention to driving on the road. Use hand-free operation or earpiece if a call is needed.

### **Aircraft**

Mobile device may cause harmful interference so turn off your mobile device before boarding an airplane.

### **Blasting areas**

Always obey the related limits and regulations and do not use your mobile device in blasting areas. Turn off your mobile device in areas posted “turn off electronic devices”.

**Potentially explosive atmospheres**

Turn off your mobile device in the gas station and areas near fuel and chemical containers. Turn off your mobile device in areas posted “turn off electronic devices”.

**Medical devices**

Turn off your mobile device whenever instructed to do so by posted signs near some medical equipment. Mobile device may interfere with pacemakers, hearing aids and some other medical transplanting equipment. Do not put your mobile device near pacemakers nor carry in the breast pocket.

**Accessories and battery**

Use the accessories, batteries and chargers approved by manufacturer. Use of batteries not approved by manufacturer may cause injury.

**Emergency calls**

Turn on your phone and keep it in service areas, dial emergency phone numbers and then press send key to make a call.

**When losing your phone**

To avoid any economy damage, please inform the Tele-communication Company or agencies to lock your SIM card when you lost your phone.

When you inform the telecom company or agencies to lock your SIM card they need to know the IMEI No. of your phone, which you can find printed on the label on the back of your phone when taking off the battery. Please backup this number for future need

For safety consideration, you can make preventative measures such as set PIN Code for your SIM card to prevent other persons using your SIM card without your permission.

**Keep away from children**

Keep the phone, battery and charger away from children to avoid any personal injury.

## 3 Use and Care

To take care for this mobile device, keep it away from:



### Any kind of fluid

Keep the device away from water, rain, humidity, sweat or other moisture.



### Extreme heat or cold

Avoid the temperature below  $-10^{\circ}\text{C}/14^{\circ}\text{F}$  or above  $45^{\circ}\text{C}/113^{\circ}\text{F}$ .



### Microwave

Don't try to dry your phone in a microwave oven.



### Dust and dirt

Don't expose your phone to dust, dirt, sand, food or other inappropriate materials.



### Cleaning solutions

Use only a dry soft cloth to clean your phone. Don't use alcohol or other cleaning solutions.



### Ground

Don't drop your phone.

## 4 Essential

### 4.1 Power On/Off

**ON:** To turn on your phone, press and hold the power on/off key for two seconds.

**OFF:** To turn off your phone, press and hold the power on/off key for two seconds.

**Note:** Please follow the restriction of airplane and hospital. If you don't need network, you can select flight mode.

### 4.2 SIM and Battery Installation

Firstly, please turn off your mobile phone and disconnect it with charger before removing the battery.

Secondly, press and jog the battery door let it glide to the top of the phone, then make the battery door open.

Thirdly, insert the SIM card into the card slot. Please insert the SIM card with the right direction of golden touch spot.

Fourthly, insert the battery.

Finally, press power-on Key for turning the phone on.

### 4.3 Battery Charging

New batteries are not fully charged. Open the protective cover on your phone's accessory connector port, then insert the battery charger plug into the accessory connector port on the side of your phone as shown, and plug the other end into an electrical outlet. Your phone might require several hours to charge fully. When your phone is power off, it might take a few seconds

to show charging display and it shows charge complete when finished. When your phone is power on, the battery icon flickers when it starting charging and become still with full bars in battery icon when finished. If your battery is lower than 25%, MB-6900 will alarm with battery icon shown on the screen. If really too low, mobile phone will be turned off.

### **Battery Tips**

Battery life depends on the network, signal strength, temperature, and accessories you use.

Always use Original batteries and chargers. The warranty does not cover damage caused by non-original batteries, charger and/or accessories.

New batteries or batteries stored for a long time may take more time to charge

When charging your battery, keep it near room temperature.

When storing your battery, keep it uncharged in a cool, dark, dry place.

Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F).

Always take your phone with you when you leave your vehicle.

It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

Never dispose of batteries in a fire because they may explode.

## **4.4 Charge Battery via Charger**

Firstly, connect the data cable with the charger.

Secondly, connect cable end with the multifunctional jack of MB-6900. If the charger was plugged incorrectly, then your MB-6900 may be damaged. So please be careful for this step.

Thirdly, plug the charger into the socket. You can use the mobile phone when charging battery, but the battery charging time will be longer. When the mobile phone is charging battery, the touch screen may be not so sensitive because of unstable battery volume. So you'd better use mobile phone without being charged. Mobile phone will get hot when being charged. It is normal and will not affect the service life of mobile phone.

Finally, when the battery icon stop flickering, i.e., it is charged to full status, please stop the connection between the charger and mobile phone. Then pull out it from the power socket. Please do not remove the battery before removing the charger. Otherwise the mobile phone maybe damaged. Please note that first charging process may need 4 hours or up. Battery is a kind of consumable item, so it will wear down after a long time. The primary battery time is 1450 MAH.

## **4.5 Charge Battery via Computer**

Firstly, please turn on your computer before charging battery.

Secondly, please connect cable end with the multifunctional jack of MB-6900.

Thirdly, plug the charger into USB port of computer. Please wait a while before charging battery.

The waiting time for different data cables is subject to the cable type supported by computer.

Finally, when the battery icon stop flickering, i.e., it is charged to full status, please stop the connection between the computer and mobile phone. Then pull out it from the computer.

## **4.6 Memory Card**

MB-6900 supports FAT only. If you insert memory cards of other format, MB-6900 will prompt you to format the memory card. Frequent writing and data deleting will shorten the service life of memory card. If you insert a memory card, then the catalogs of file will be shown on the folder of /mnt/sdcard.

Firstly, press and jog the battery door let it glide to the top of the phone, then make the battery door open.

Secondly, insert memory card into the card slot with the right direction of golden touch spot.

Thirdly, fix the position of memory card with caging.

Finally, close the battery door.

## 4.7 Remove Memory Card

Before removing memory card, please unload it for safety concern.

The step is:

Firstly, select settings→ SD card & phone storage→ Unmount SD card→ Make power-off when standby.

Secondly, remove the battery door,

Thirdly, press and move the memory card.

Fourthly, take the memory card out of the slot.

Finally, install the battery door.

Note: Please do not remove the memory card when you are using MB-6900, otherwise the data may get loss or the phone may be damaged. .

## 4.8 Format Memory Card

If you format memory card on the computer, memory card and mobile phone will not be compatible. So please just format memory card on mobile phone. In standby status, please select settings→ SD card & phone storage→ Unmount SD card→ Format the SD card→ Format SD card.

Note: Please copy all important data to MB-6900 first. Please note that the manufacture does not guarantee for data loss of user mistakes.

## 5 Elementary Operation

### 5.1 Calibrate when using for the first time


























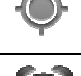






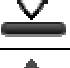




Click the white point of screen and make calibration.



Done successfully! Next time you can select the program for manual calibration.

## 5.2 Screen Explanation

Icon	Definition
	Dial Shortcut Key
	Enter Program Menu
	Message Shortcut Key
	No Service
	Signal Strength
	Has connected to GPRS Network
	Has connected to 3G Network
	Has connected to EDGE Network
	Has connected to WLAN Network
	Has activated Bluetooth
	Has connected to Bluetooth Headset
	Missed Call
	Restricted Service
	Preparing SD Card
	Making Positioning
	Alarm on

	SD Card Error
	Flight Mode
	Unlock Screen
	Silent(Select During Standby Status)
	Sound(Select During Standby Status)
	Vibration(Select During Standby Status)
	Silent during Calling
	Full Storage
	Data Synchronization
	New WIFI network has been found.
	No Battery
	Full Battery
	Battery Charging
	Has Connected with USB Cable
	Download Data
	Upload Data
	GPS Positioning
	Calling
	WIFI Network

## 5.4 MB-6900 Touch Screen

The following notes help you to use MB-6900 easily.

1. Please do not use sharp tools to scratch the touch screen.
2. Please do not use the touch screen to touch other electronic devices because the electrostatic discharge would make the touch screen running failure.
3. Please do not use the touch screen to touch water because humid environment may interfere the working of touch screen thus may be making failure.
4. You can use your fingertip to touch the screen. Please do not use fountain pen to operate on the screen. Use stylus carefully, don't force too much on the screen.
5. If the touch screen has offset, please make manual calibration first.

### **Basic Usage of Touch Screen:**

1. Point Holding : Hold a program about 2 seconds, and then you can open the program.
2. Rolling : Click and then roll 4 directions for moving the program.
3. Drag : Drag a program and you can move it.
4. Double click : When you need to view pictures or webpage, please double click twice for zooming in/ out.
5. If you do not use the phone for a specified length of time, the touch screen function will be turned off. If you want to use touch screen again, please press physical keys except for volume control key.
6. Backlight can be also adjusted. Click the menu of Settings when standby and then select Display→ Screen Timeout→ Time. If you want to lock, then press Power key.

## 5.5 Standby Key Lock Operation



Drag the icon to the right direction for unlocking the screen.



Sound mode is open when MB-6900 is in standby status. If you drag to the right


direction, then the sound icon will be transformed to the icon of vibration.



If the function of vibration is off, then you will see this Silent icon.



## 5.6 Slot & Physical Keys

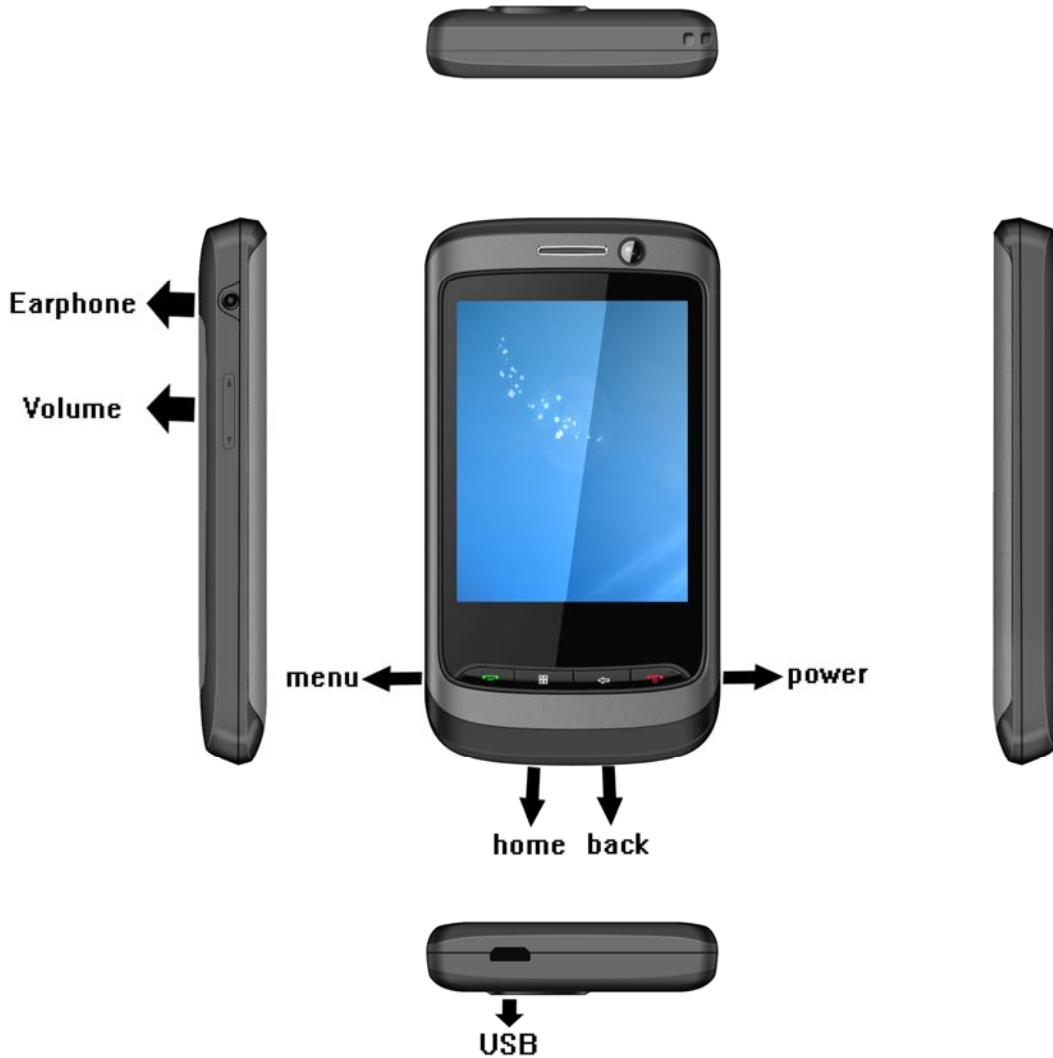

Press Menu key for opening programs.


Press Home can return to the desk.

Press Back for returning to the previous page.


Press Power for locking MB-6900 or turning on/off.

## 5.7 Visit Programs and Edit Icons


Press an icon on the screen, when it is zoomed in, please drag it. If you want to delete, just drag the icon into the rubbish bin.

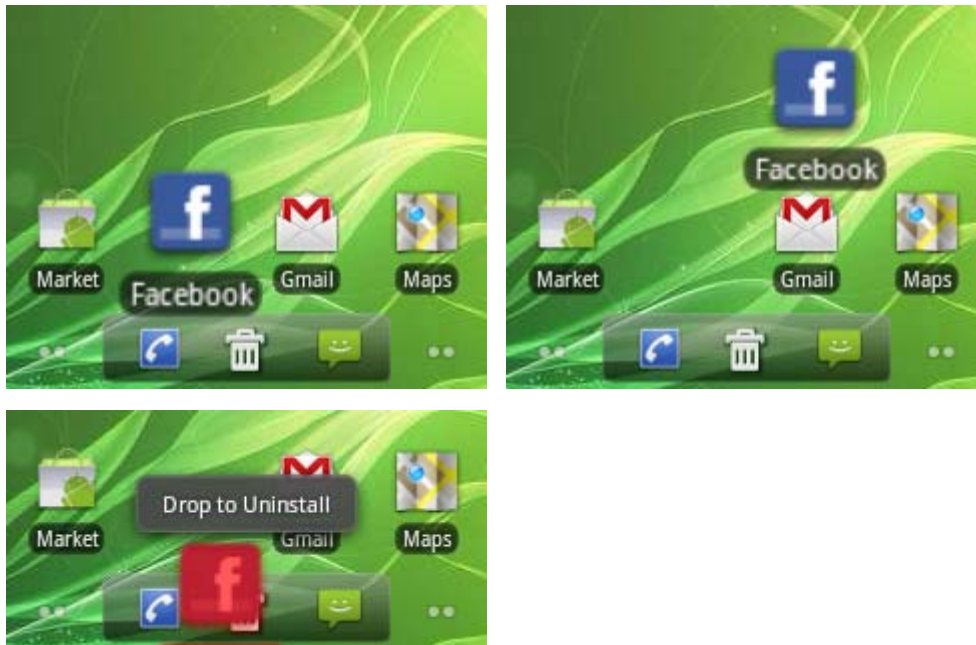

### Steps of Visiting Programs:

- 1 Select this icon  for entering the list of application programs under standby mode.
- 2 Please roll left or right for selecting other programs.
- 3 Please select programs.

Tips: You can press the program for adding shortcut. You can move the icon to the place you need as the following picture shows.

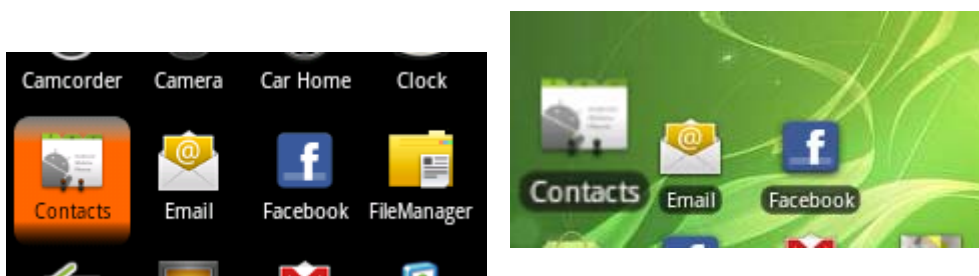

4 Press Return Key (Physical Key) and back to the previous page. Press Home and return to the screen of standby.



5 We have adopted built-in sensor into MB-6900. The screen can be shown in rotate mode

automatically. If you don't want it to be rotated, please change settings from Settings→ Display→ Auto-rotate Screen.

## 5.8 Adding Widgets



Please press Menu key and select Add for adding widget.

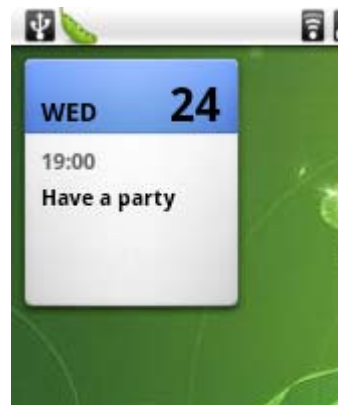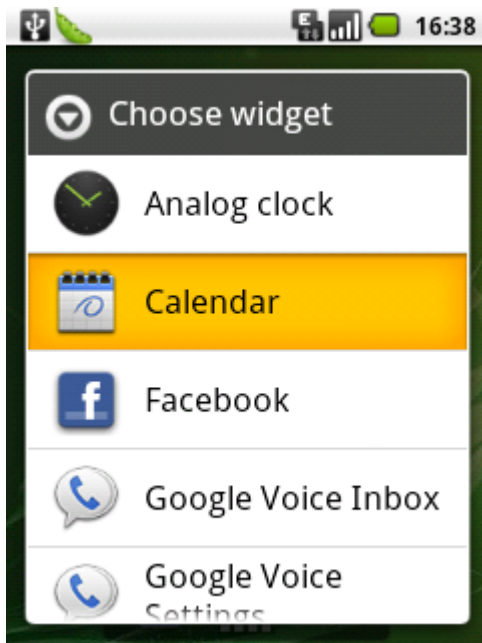

Please select Widget→ Calendar until you have the widget of Calendar.

## 5.9 Synchronizing with Your Google Account

Enter Settings→Accounts & sync→Background data, and tick√

Click Add account→Google→Next→Sign in, and then use your Google account to sign in. If you don't have Google account, please select Create, and the mailbox should be suffixed with **@gmail.com**

If you want to synchronize with your account automatically, please tick √ Auto sync.

Question: Why synchronize with Google account ?

Answer: Because Android mobile phones have connections with Google mailbox. If you don't add your Google account, then you cannot enter the function of Calendar.

Applications concerned : Calendar, Gmail, Contacts, Maps, Navigation, Market, Talk and Voice.

Remark : One mobile phone can add many Google account. If you want to delete the first account, please restore the factory settings.

## 6 Basic Function Settings

### 6.1 Application Programs

MB-6900 equips with multi-functions with supporting various application programs. Please be careful for running too many tasks at the same time in case of call interruption, system halt, storage problem, etc. You can use task manager for finishing unnecessary programs.

1 When in standby mode, press menu for entering settings → Manage applications. Then all running programs will be listed.

2 If you want to close a certain program forcibly, please select Force stop.

3 If you want to delete a program, find it in the list and select Uninstall.

4 If you want to install application program, search in Market and then install. You can also click the API file which is stored in File Manager ( Remark : Enter Settings → Unknown sources, tick it ✓ )

As for some other programs, you can select Move to SD Card for saving ROM space.

### 6.2 Current Time & Date

1 When in standby mode, please press Menu and select settings → Date & time.

2 You can set time and date or other functions. You can tick on Automatic for achieving time of local network automatically.

Remark : If set time manually, please make sure you set according to the correct time zone.

Otherwise some functions may be influenced.

## 6.3 Sound On or Off

- 1 When in standby mode, press Menu and select Settings → Sound.
- 2 Select the menu below Feedback.



## 6.4 Ring Tone

You can press the side key for adjusting ring tone.

You can also enter settings → Sound → Volume for the adjustment.

## 6.5 Silent Mode

If you want to run the mode of Silent, please follow the steps below:

- 1 When in standby mode, press Menu, enter Settings → Sound → Tick  under the menu of Silent Mode
- 2 When in standby mode, press Power key and select Silent mode.
- 3 If the screen is locked. Please slide the icon to left side. 

## 6.6 Ring Tone

- 1 When in standby mode, press Menu and then follow Settings → Sound → Phone Ring Tone.
- 2 You can enter Ring Tone and select Confirm.
- 3 If you need to add your songs, please select one song in the music. Press Menu and select Use as Ring Tone.

## 6.7 Animation

- 1 When in standby mode, press Menu and then follow Settings → Display → Animation
- 2 Select one animation you need.

## 6.8 Wallpaper

- 1 When in standby mode, press Menu and then select Wallpaper.
- 2 Select pictures of static state.
- 3 Select Save or Set Wallpaper.
- 4 If you need live wallpaper, please just select Live Wallpapers. Live wallpaper is defaulted by the system. If you want to add new one, please download from the menu of Market or other means yourself.

## 6.9 Screen Brightness

- 1 When in standby mode, press Menu and then follow Settings → Display → Brightness
- 2 Drag and slide to the level of brightness.
- 3 Select OK.

**Remark:** The brightness of screen will influence the battery consumption of mobile phone.

## 6.10 Screen Lock

You can lock MB-6900 for privacy concern. After locking the screen, you will be asked to input the password each time turning on and unlocking the mobile phone.


If you forget your password, please take the phone to our service center. We will not be responsible for the loss of safety code& private document caused by the use of illegal software.

## Screen Lock Pictures

1 When in standby mode, press Menu and then follow Settings → Location & Security → Set Up Screen Lock → Pattern

2 Please pay attention to the prompts and samples for your selection.

3 Drag at least 4 points and draw a picture.

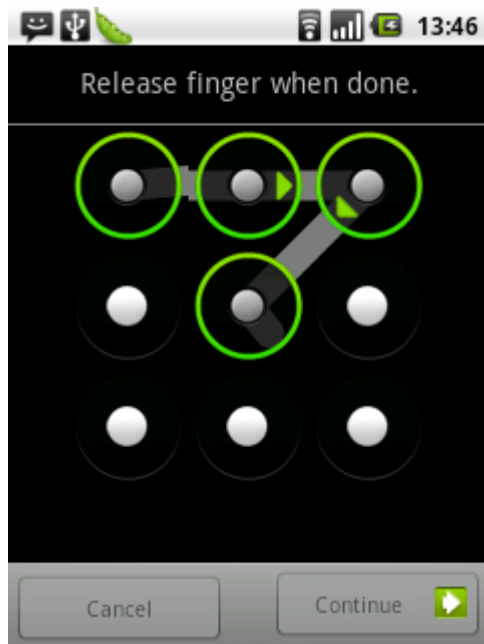

4 Select Continue.

5 Draw picture again and confirm.

### A. PIN Setting for Phone Lock

1 When in standby mode, press Menu and then follow Settings → Location & Security → Set Up Screen Lock → Pin

2 Input new PIN and continue

3 Input again and confirm

### B. PIN Setting for Phone Lock

1 When in standby mode, press Menu and then follow Settings → location & security → set up screen lock → password

2 Set new password and continue

3 Input again and confirm

**Remark:** A and B pin settings are for the use of locking phone. You can select either A or B. If you lose your password, please turn to our service center.

### **C. PIN Setting for SIM or USIM Card**

1 When in standby mode, press Menu and then follow Settings → Location & Security → Set up SIM Card Lock

2 Input your PIN and confirm

#### **Remarks:**

1 If you have set PIN, then you need to input PIN each time when you turn on the mobile phone.

2 If you input PIN incorrectly, then your SIM or USIM card will be locked. Then you need to input PUK for unlocking SIM or USIM card. If PUK is input incorrectly as well, your SIM or USIM will be locked. Then you need to turn to your service provider for unlocking.

 
# 7 Input Method & Text Editing

## 7.1 Change Input Method

1 Go to the following text box.



2 Select Input Method

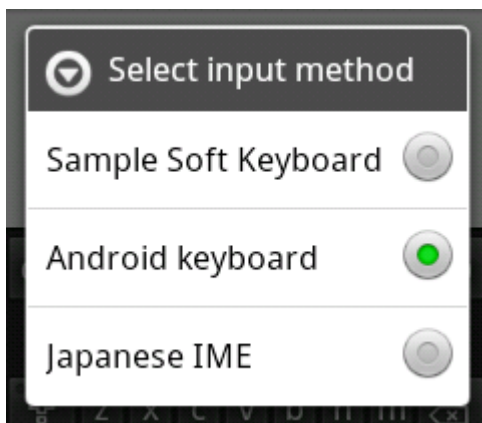

3 Select the Input Method you need.


If you want to use the input method you installed or changing the input method, please press Menu and then follow Settings → Language & keyboard → Select the input method you need

and tick when in standby mode.

## 7.2 Copy and Paste Text

When you input contents for your text, you can take good advantage of the function of copy & paste.

- 1 Please put the cursor into the start position you need.
- 2 Click the text and input your contents.
- 3 Select the text from the list shown on the right side.
- 4 Click the end position.
- 5 Drag the highlighted content.
- 6 Select Copy or Cut for pasting the text into clipboard.
- 7 Drag the text and you can paste to another program.
- 8 Select Paste for pasting the text from clipboard to the text of another program.

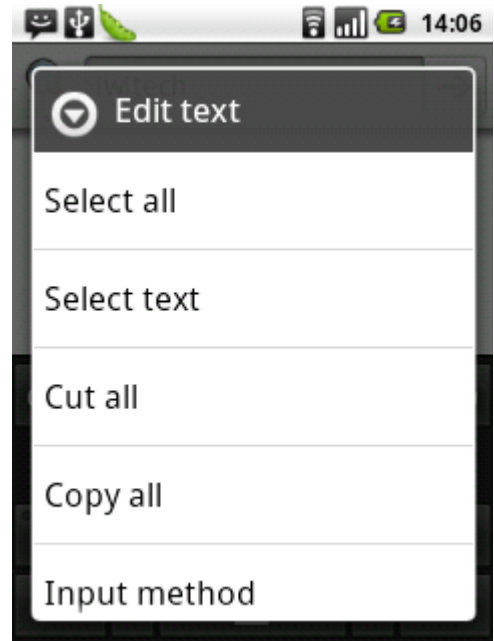

## 8 Call Function

### 8.1 Dial and Receive Call

You can use the touch screen for realizing the call function.

When in standby mode, select phone icon  → Dial numbers, and input district code and mobile phone number.

If you want to end the call, please press Menu and then select End Call.

You can also press Power Key for ending the call immediately. You can follow Settings → Accessibility → Tick  Power Button Ends Call

You can call numbers via other menus, such as Call Log, Contacts,

If you want to visit the call logs, please select the latest number of call logs. Please follow Phone → Call Log

### 8.2 Answer a Call

1 When there is a call comes, please drag the icon to the right direction and unlock it.



When the mobile phone rings, you can press side key volume for make it silent.

2 If you want to end the call, please press Menu and then select End Call.

You can also press Power Key for ending the call immediately. You can follow Settings → Accessibility → Tick  Power Button Ends call.

## 8.3 Reject a Call



When there is incoming calls, please drag the icon to the left direction and unlock it. Then you will hear busy line signal.

## 8.4 Dial International Call

1 When in standby mode, select the icon of Call, then you will enter the dial pad. Please follow the order of making international call: 00→ Country Code→ the Number you want to dial→ Press Dial Key.

## 8.5 Use Earphone

Please plug in the earphone, and then you can answer or end the call according to your needs. The attached earphone is just for MB-6900, which may not be compatible with other mobile phones or MP3 players.

## 8.6 Voice Call

You can use the following functions in voice call:

- 1 You can press volume side key up or down for adjusting the volume.
- 2 Slide Dial pad up is for opening the dial pad and slide down for closing.
- 3 If you need to dial one more call during a call, please press Menu→ Hold, and then Add Call.
- 4 If need the voice mute, please enter Menu and then press Silent.
- 5 If you need to open speaker, enter Menu→ Speaker.

**Remark:**

- 1 It may be hard to hear the voice if you open the speaker in a noisy environment.
- 2 You can also use blue tooth to finish a call by selecting Bluetooth function.
- 3 Please press Home for returning to the standby mode. Then you can shift the calls or open the status bar for your other needs.



## 8.7 Call Forwarding

Call forwarding works for sending calls to your designated number once you cannot receive the calls or out of call service.



- 1 When in standby mode, select Menu, enter Settings → Call settings → Call Forwarding
- 2 Select Always Forward/ Forward when busy/ Forward when unanswered/ Forward when unread according to your needs.
- 3 Input the number of forwarding and make it enable. Done.

# 9 Message
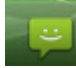
## 9.1 SMS

- 1 When in standby mode, select the icon of message  → new message.
- 2 Then select a number. There are 2 ways to input numbers, one is: Input numbers in the blank column; The other one is: you can also select the icon near the blank column. 
- 3 Type to compose the contents you want. If you need to insert Smiley, press Menu and then Insert smiley.
- 4 Select Send then your SMS will be sent.

## 9.2 MMS

- 1 When in standby mode, select the icon of message  → new message.
- 2 Then select a number. There are 2 ways to input numbers, One is: Input numbers in the blank column; the other one is: you can also select the icon near the blank column. 
- 3 Press Menu and then Attach for attaching MMS. You can select attachment from your file manager in which stores photos, videos and sound files.
- 4 Press Menu and then Add Subject.
- 5 Select Send then your MMS will be sent.

## 9.3 View SMS/ MMS


- 1 When in standby mode, select SMS or MMS icon which specify different messages.
- 2 Select single SMS or MMS. You can slide the screen for viewing all history SMS or MMS.
- 3 If you are viewing MMS, please select the attachment.

# 10 Mailbox

## 10.1 Setup Email

- 1 When in standby mode, select Email after entering Home.
- 2 Input your email address and password, then press Next.
- 3 Select Next for setting up an email address, or Manual Setup. You can select POP3/IMAP/Exchange for your actual email server.
- 4 Please follow the prompts for your operation. After finishing the setup of email account, the information of your mailbox will be downloaded automatically to MB-6900. If you have built more than 2 accounts, you can shift between the accounts in this way: Menu→ Accounts, and then select an account you need.

## 10.2 Send Email

1 When in standby mode, open application program list according to the icon , then select Email→ Menu→ Accounts.

2 Press Menu and enter Compose.

3 Select an email address. You can input the email address manually.

If you need to CC your email to others, please press Menu and that enter Add CC/BCC.



4 As the picture above shows, please select the column of Subject and input subject of email.


5 Please select the column of Compose Mail for composing an email.

6 If you need to add attachment, please select Menu and enter Add Attachment.

6 Select Send for sending email.

## 10.3 View Email

When you open your email account, you can view the emails received last time, or checking new emails.

1 When in standby mode, open application program list according to the icon , then select Email→Accounts.

2 Press Menu and then Refresh.

3 Back to the mailbox for viewing emails.

## 10.4 About Gmail

Gmail is the specific email program of Google.


The difference of Gmail and other Email account is:

You can open your Email account as personal or company account. When you are using Gmail, you can only log in Google account and be connected with other programs of Google, such as Google calendar.

Method of logging in Gmail in MB-6900:

1 Please creat or log in your Google account first ( Please refer details to Content 5.9


Synchronizing with Your Google Account )

2 Open application program list according to the icon , then select Gmail. If you have logged in many Google accounts, then you can shift the account on the right top side of Gmail.

3 If your mailbox does not update email automatically, please press Menu and Refresh.

# 11 Camera

## 11.1 Take Pictures

1 When in standby mode, please open the application program list  and then select Camera.

2 Select the following icons for specific settings.



Zoom In/Out



Flash Mode



White Balance



Store Location



Picture Size




3 Press Shutter for taking pictures.


4 Press Menu, enter Gallery for viewing pictures.

The defaulted storage for pictures is: SD Card/ DCIM/ Camera


## 11.2 Camcorder

1 When in standby mode, please open the application program list  and then select Camcorder. You can also press Menu and enter Switch to Video if you are using camera.

2 Select the following icons for specific settings.

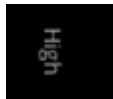

Video Quality

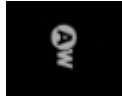

White Balance



Color Effect



3 Press the shutter of Camcorder for taking video.



4 Press the icon and stop taking video.


5 Press Menu, enter Gallery for viewing videos.

The defaulted storage for video is the same as that of pictures: SD Card/DCIM/Camera

# 12 Music

You can play music by entering Music. It supports the format of MP3 only.

## 12.1 Play Music

1 Open the application program list , slide to left side and then select Music.

2 Select Songs and make the following operations.



Now Playing



Shuffle Play



Repeating All Songs



Shift to Previous Songs



Pause



Shift to Next Songs


Songs can be background play. Press Home and then you could back to the standby screen for other operations.

If you are in standby screen but want to back to the music play screen, please just slide the status bar on the top and then select the ongoing music.

You can use the side key for adjusting the volume of music.

## 12.2 Add Music Widget


- 1 Press Menu in the standby screen, select Add → Widget → Music.
- 2 Select the size of Widget.
- 3 Drag the widget to the standby screen for turning on music quickly.

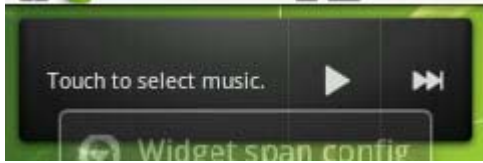

## 13 Gallery

You can view pictures or videos in Gallery. We suggest you use the format of JPG for pictures and 3GP & MP4 for videos.

### 13.1 View Pictures

1 When in standby mode, please open the application program list  and then select Gallery.

2 If you have many gallery and pictures, please slide the screen up and down for viewing and selecting.

3 You can zoom in and out the pictures by double click or using the icon below when viewing

pictures. 

4 Press Menu and Rotate for meeting your need of rotating pictures.



5 Click the triangle left or right for shifting to previous or next pictures.

6 You can also keep pressing a picture and make operations in Picture Options.

### 13.2 Contact Icon

1 Select a picture and press Menu, enter Set As.

2 Select Contact Icon and select the person


3 Please adjust the size of picture, press Save for saving the picture. Then when the person send message or call you, His/her icon will be shown on the screen.

## 13.3 Wallpaper

- 1 Select a picture and press Menu, enter Set As.
- 2 Select Wallpaper.
- 3 You can adjust the size of picture, press Save for saving the picture.

## 13.4 Share Pictures/Videos


- 1 Open a picture or video, there will be a prompt of Share on the top of picture, Press Share then you can share picture via bluetooth, facebook, Gmail, Messaging, Picasa, etc.

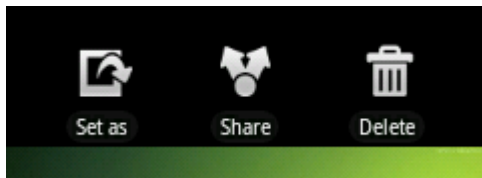

- 2 You can also keep pressing a picture or video, and make operations in Picture/video Options.
- 3 Open a picture or video, press Menu and select Share.

# 14 Contacts

## 14.1 New Contact

1 When in standby mode, please open the application program list  and then select Contacts.

2 Press Menu, enter Contact and then select New Contact.

3 Input Given Name and Family Name.

5 Press Done.

You can also create new contacts from the dialpad.


1 When in standby mode, please press the icon of dialpad.

2 Input a telephone number.

3 Press Menu and then Add to Contacts.

4 Press Done.

## 14.2 View Contacts

1 When in standby mode, please open the application program list  and then select Contacts.


2 Slide up and down in the contact list.

3 Select one number you need.

Then you can press the icons of calling or sending message.

Press number of contact and then press Menu, you can select Edit Contact, Share, Options, or Delete Contact.

## 14.3 Options of Contacts


1 When in standby mode, please open the application program list  and then select Contacts.

2 Press Menu → Import/Export Contacts→ Import from SIM card / Import from SD card  
Export to SD card/ Share Visible Contacts, select the menu according to your needs.

# 15 Calendar

Please log in calendar with your Google account.

## 15.1 New Event

1 When in standby mode, please open the application program list  and then select Calendar.

2 Press Menu → More → New Event.

3 Please input the event in detail.

4 Select Done.

If you want to view by Date, Week or Month, please press Menu and select Day, Week or Month.

If you want to check the events, please select the date which marked with blue point on calendar.

If you want to check the event of today, then press Menu → Today.

## 15.2 Calendar Alarm

After setting a schedule on your calendar, then the icon of calendar will be shown on the status bar.

1 When in standby mode, you can slide down the status bar for checking the calendar.


2 Select one to-do list from status bar.

3 You can select Snooze All or Dismiss All for your needs.

# 16 Browser

You may be charged if you visit network or download multimedia. Please contact your service provider for the details.

## Browse Webpage

When in standby mode, please open the application program list  and then select Browser for entering your designated homepage.

If you want to change to other websites, please press the URL area, input website and then click Go on the lower side of the screen.

If you want to zoom in and out the webpage, you can use this icon



If you want to add new window, then press Menu → New window.

Check current website windows, press Menu → Windows. Press one website then you can open one website. If you want to open other websites, please Menu → the website you need.

Refresh website: Press Menu → Refresh.

Forward website: Press Menu → Forward.

Make website as bookmark: Press Menu → Bookmarks.

Find key words of website: Press Menu → More → Find on page.


Copy text of website: Press Menu → More → Select text.

Share website via bluetooth, facebook, Gmail and messaging: Press Menu → More → Share page.

View download history: Press Menu → More → Downloads.

Change text size, default zoom, and so on: Press Menu → More → Settings.

**View History Website:**

1 When in standby mode, please open the application program list  and then select Browser

2 Press Menu→ Bookmarks→ Most visited.


3 Select the website you want to open.

Select the grey star icon on the right side of website for adding the website to bookmark list.


Then the icon will become yellow.

# 17 Bluetooth
 
## 17.1 Activate Bluetooth

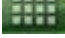When in standby mode, please open the application program list  and then select Menu. Following this order: Settings→ Wireless & Networks→ Bluetooth Settings. Then Tick ✓ Bluetooth.

Then you can search your mobile phone to react to the blue tooth.

1 When in standby mode, please open the application program list  and then select Menu. Settings→ Wireless & Networks→ Bluetooth Settings → Scan for Devices.

2 Then you can select a device.


3 Input password if require.

4 Wait for pairing.

Remark: As for some special device, such as earphone or vehicle-mounted device, you may need to input a fixed bluetooth password, i.e., 0000.

## 17.2 Use Bluetooth

### Send Information

1 When in standby mode, please open the application program list  and then select File Manager → Select one file for sending → Share → Buletooth. You can also send the information from Gallery or Music.

2 Search device and wait for pairing.

### Receive Information

1 When in standby mode, please open the application program list  and then select menu,

follow the order: Settings→ Wireless & networks→ Bluetooth settings → Discoverable. There is only 120 seconds for discoverable process. If the bluetooth cannot find the mobile phone, you need to tick Discoverable again for renewing the discoverable process.


2 Input password if the connection requires and wait for pairing.

3 You will be prompted accept the file or not. You can select Accept or Decline for your needs.

The data will be downloaded in the file of Downloads / Bluetooth

 
# 18 WLAN

## Activate WLAN

When in standby mode, please open the application program list  and then select Menu. Follow the order: Settings→ Wireless & Networks → WIFI Settings → Tick WIFI.

There will be battery consumed when opening the function of WLAN. So we suggest you open WLAN when needs. You can enter WIFI Settings, press Menu → Select Advanced → WIFI sleep policy → When screen turns off. Then WIFI will be turned off automatically after standby 3 minutes for battery saving concern.

## Search and Connect WLAN

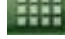1 When in standby mode, please open the application program list  and then select Menu. Follow the order: Settings→ Wireless & Networks → WIFI Settings → Tick WIFI.


2 Mobile phone will search WLAN automatically.

3 Search network in WLAN

4 Input network password if require.

5 Select Connect.

## Add WIFI Network

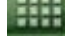 1 When in standby mode, please open the application program list  and then select Menu. Follow the order: Settings→ Wireless & Networks → WIFI Settings → Tick WIFI→ Add WIFI Network.

2 Select SSID and Security Type.

3 Select Save.

# 19 Clock

1 When in standby mode, please open the application program list  and then select Clock



2 Press Menu → Add Alarm → Then you can set the time you need → Set. If you need to have more functions on your clock, you can set Repeat, Ringtone and Vibrate.

3 Select Done.

## Icons of Clock



Shows time, date and alarm.



Fast Light



Battery Prompt



Gallery Shortcut




Music Shortcut



Back to Standby Screen

## 20 Calculator

1 When in standby mode, please open the application program list  and then select Calculator.

2 You can use the keys of calculator for your calculation. You can slide left or right for more information as the picture shows below.



**Remark:**

If you need to clear the numbers in the top column, then just press CLEAR.

If you need to copy the numbers in the input column, please refer to the contents of 7.2 for copy and paste.

## 21 Navigation

Navigation function works for the convenience of driving. Please pay attention to your safety when open this function during driving.

You can slide left and right for shifting the detailed functions




Enter Navigation



Phone




Speak Destination (Optional)

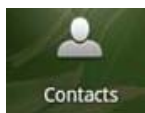


Contacts



Music

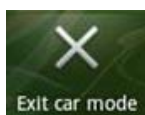

Exit Car Mode

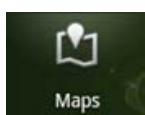

Maps



Settings




Automatic/ Day/ Night





Add Shortcut

## 22 FM Radio

When in standby mode, please open the application program list  and then select FM Radio. Each time when you need to listen to FM Radio, please plug in earphone first.

Press Menu, Then you can search all stations. If you need to set frequency, you can press Set Frequency, and input the frequency you want in the screen. Press Enter for entering the frequency.

If you need to save the frequency you like, just press the icon of heart  on the left side of the frequency.

If you need mute, please press the icon of sound  on the left side.

If you need to hear the radio without earphone, please press Menu and select Speaker.

If you cannot search frequency successfully, please press Menu, and then select More, Finally select Set Area.

When listen to the radio, you can press the return key and Home for returning to the standby screen.

If you need to turn off FM, please press Menu, then select Switch Off.

**Remark:** FM and Music cannot be played at the same time.

## 23 Maps

You can take good advantage of Google map in MB-6900. You need to synchronize your Google account with the map function. Please follow this order: Settings → Location & Security → Tick Use Wireless Networks and Use GPS Satellites for improving the accuracy of positioning.

1 When in standby mode, please open the application program list  and then select Maps.

2 Press Menu and Select My Location for making positioning.

If you need to search map, press Menu and select Search.

You can drag and slide the map to every direction you need for viewing. Press the icon




for zooming in and out.

If you need to check the traffic or terrain around, please press Layers.

### Activate the Function

1 When in standby mode, please open the application program list  and then select Maps.

2 Press Menu and select Directions.

3 Input My Location and End point. You can also select the icon  for choosing starting point and end point.


4 Select different modes:


 Walking

 Bus

 Driving

5 Press GO for begin navigation.

**Remarks:** If you need to check the positioning info in details, press the icon  on the right

top side. If you need to check the navigation routes, click the green button  for details.