

MB-D1000
USER MANUAL

 
Welcome Guide

PLEASE READ THIS INFORMATION BEFORE USING THE PHONE TO MAKE A BETTER USE OF YOUR PHONE. WE ARE NOT RESPONSIBLE FOR ANY DAMAGE DUE TO YOUR MISUNDERSTANDING OF THIS INFORMATION AND MISACTTING.

We are endeavoring to improve our products and services. We reserve all the rights to revise and change the description of this product and its software as well as this user's manual without obligation to notify any person of such revisions and changes.

This user manual is for your better use of this phone not an approval of any accessories. All the pictures in this manual are for reference only. There may be slight difference between the appearance of phone/ keys/ contents of display used in this manual and those of your phone. Please refer to your phone for actuality. Some features introduced in this manual are network or subscription-supported features. Please contact your service provider for further information.

MB-D1000 Introduction

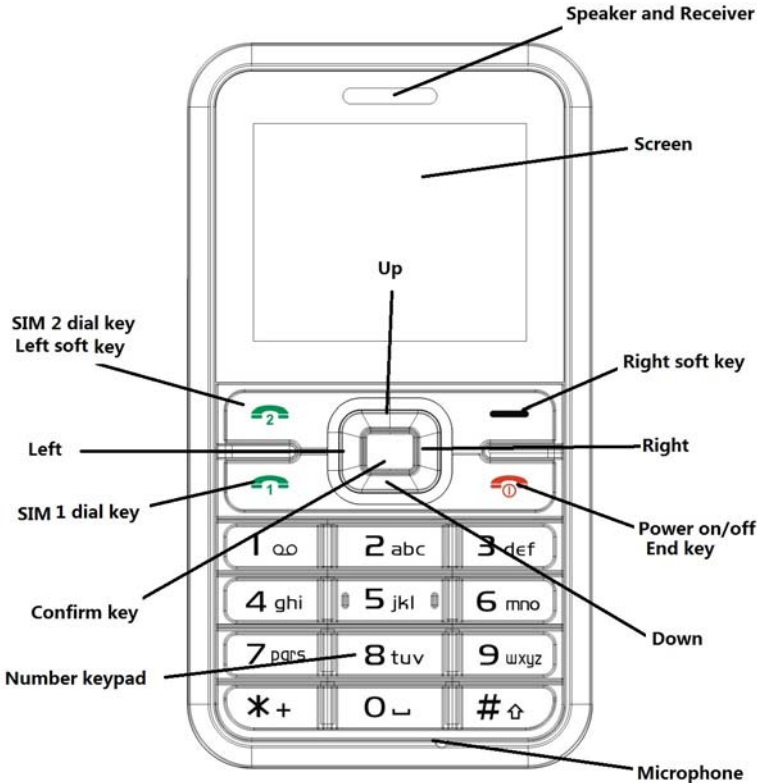

Note: All the illustrations, simulated screen and related images used in this manual are for reference only. Please refer to your handset for actuality.

1. Safety Information



Read this information before using your mobile device otherwise may result in personal injury or your device not complying with local laws.

Battery:

If a conductive material such touches the exposed terminal, short circuit may occur resulting in property damage, bodily injury or burn. To avoid risk of leaking electricity, take care when handling a charged battery particularly when placing it inside your pocket, purse or other container with metal objects.

Keep your mobile device from water:

Keep your mobile device dry.

Use while driving

Always obey the laws and regulations on the use of mobile devices in the area where you drive. Pay full attention to driving on the road. Use hand-free operation or earpiece if a call is needed.

Aircraft

Mobile device may cause harmful interference so turn off your mobile device before boarding an airplane.

Blasting areas

Always obey the related limits and regulations and do not use your mobile device in blasting areas. Turn off your mobile device in areas posted “turn off electronic devices”.

Potentially explosive atmospheres

Turn off your mobile device in the gas station and areas near fuel and chemical containers. Turn off your mobile device in areas posted “turn off electronic devices”.

Medical devices

Turn off your mobile device whenever instructed to do so by posted signs near some medical equipment. Mobile device may interfere with pacemakers, hearing aids and some other medical transplanting equipment. Do not put your mobile device near pacemakers nor carry in the breast pocket.

Accessories and battery

Use the accessories, batteries and chargers approved by manufacturer. Use of batteries not approved by manufacturer may cause injury.

Emergency calls

Turn on your phone and keep it in service areas, dial emergency phone numbers and then press send key to make a call.

When losing your phone

To avoid any economy damage, please inform the Tele-communication Company or agencies to lock your SIM card when you lost your phone.

When you inform the telecom company or agencies to lock your SIM card they need to know the IMEI No. of your phone, which you can find printed on the label on the back of your phone when taking off the battery. Please backup this number for future need

For safety consideration, you can make preventative measures such as set PIN Code for your SIM card to prevent other persons using your SIM card without your permission.

Keep away from children

Keep the phone, battery and charger away from children to avoid any personal injury.

2. Use and Care

To take care for this mobile device, please keep it away from:



Any kind of fluid

Keep the device away from water, rain, humidity, sweat or other moisture.



Extreme heat or cold

Avoid the temperature below $-10^{\circ}\text{C}/14^{\circ}\text{F}$ or above $45^{\circ}\text{C}/113^{\circ}\text{F}$.



Microwave

Don't try to dry your phone in a microwave oven.



Dust and dirt

Don't expose your phone to dust, dirt, sand, food or other inappropriate materials.



Cleaning solutions

Use only a dry soft cloth to clean your phone. Don't use alcohol or other cleaning solutions.



Ground

Don't drop your phone.

3. Essential

3.1 Install SIM Card

Keep your SIM cards away from the children.

Please consult your SIM card franchiser about the services and usage. SIM franchiser can be the service provider, network provider or other franchisers.

Please turn off your mobile device and disconnect it with charger before removing the battery.

 
Note: Turn off your mobile device and disconnect it with charger or any other device before removing battery door. Place the door on the phone before store and use your mobile phone.

1. Remove the battery door:

Press and jog the battery door let it glide to the bottom of the phone, then get the battery door off.

2. Insert the SIM card into the card slot:

You can see two card slots side by side. Arrowed position shows SIM card slot. Please insert SIM card with the right direction as the picture shows below.

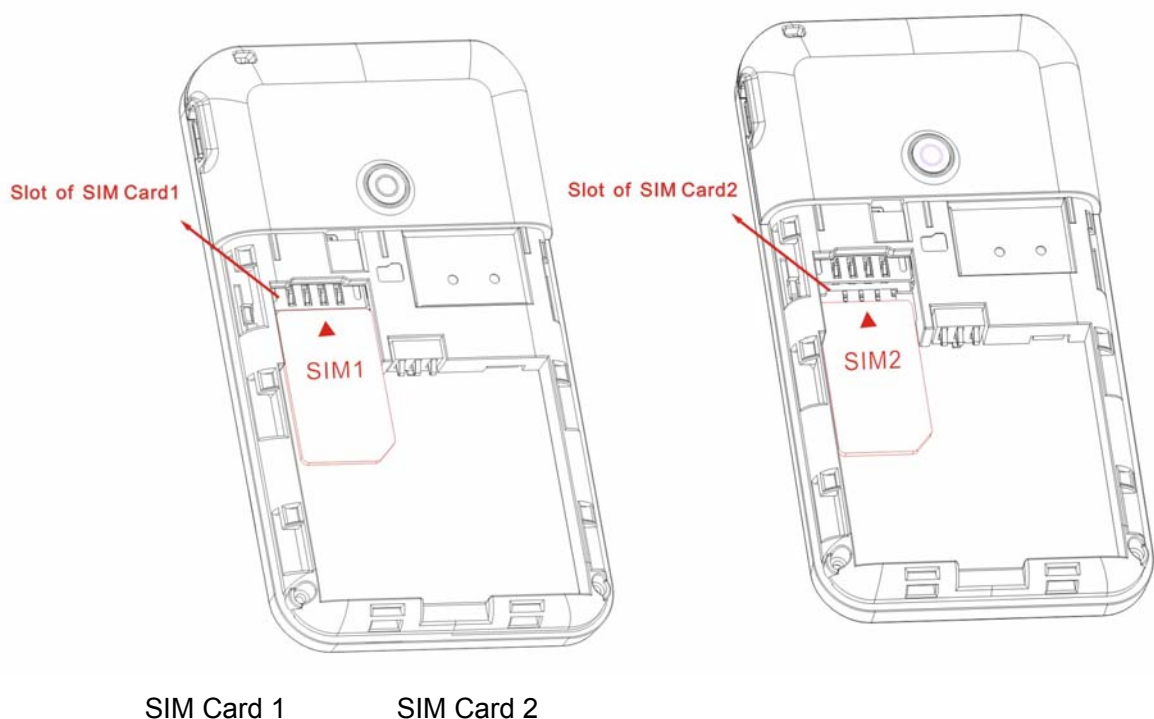

3.2 Battery Use and Installation

Battery Tips

Battery life depends on the network, signal strength, temperature, and accessories you use.

Always use Original batteries and chargers. The warranty does not cover damage caused by non-original batteries, charger and/or accessories.

New batteries or batteries stored for a long time may take more time to charge

When charging your battery, keep it near room temperature.

When storing your battery, keep it uncharged in a cool, dark, dry place.

Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F).

 
Always take your phone with you when you leave your vehicle.

It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

Never dispose of batteries in a fire because they may explode.

Battery Installation

1. Slide the battery door up and then remove the door.
2. Aim the metal terminals of the battery at those in the battery compartment and then push down and into it.

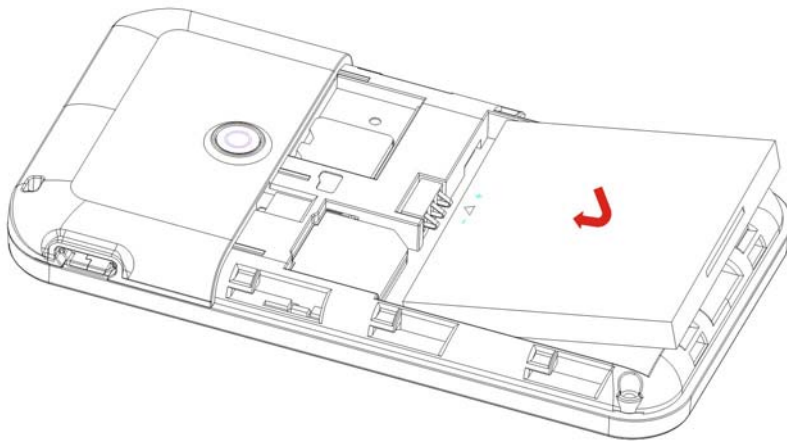

Battery Charging:

New batteries are not fully charged. Open the protective cover on your phone's accessory connector port, then insert the battery charger plug into the accessory connector port on the side of your phone as shown, and plug the other end into an electrical outlet. Your phone might require several hours to charge fully. When your phone is power off, it might take a few seconds to show charging display and it shows charge complete when finished. When your phone is power on, the battery icon flickers when it starting charging and become still with full

 
bars in battery icon when finished.

3.3 Memory Card

You can use removable memory card with your phone to store information.

Caution: Don't bend or scratch your memory card. Keep it away from static electricity, water, and dirt.

Insert the memory card into the tray as shown below:

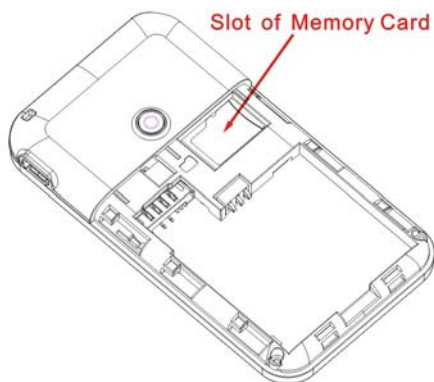

3.4 Turn it on/off

Caution: On power up, this phone may prompt you to enter your SIM card PIN code to unlock the SIM card. If your phone shows Input PUK code then means your SIM card is locked, please contact your web service provider.

To turn on your phone, press and hold the power on/off key for two seconds. If prompted, enter your four-to-eight-digit SIM card PIN code and/or four-digit unlock code.

If you do not insert a SIM card, your phone shows **Insert SIM**. None of the functions related to SIM card can be used and you can make an emergency call only.

To turn off your phone, press and hold the power on/off key for two seconds.

3.5 Make a call

Click the icon of dialing in idle, and press the number you want to dial. Whether call through SIM card 1 or card 2 depends on your need. After making a call, select **Options**→ **End Single Call** or press the end call key/power off key for ending the call.

3.6 Answer or Reject a call

When there is an incoming call, the phone rings and vibrates showing the number or the

corresponding name.

The phone provides three modes as followings:

Set-key Answering: Press dial key or enter **Options** for answering a call. If you don't want to answer the call, please press the power on/off key.

Any-key Answering: Enter **User Profiles** → **Profile Options** → **Answer Mode**, tick **Any Key** for answering a call in the mode of any key.

Earphone/Bluetooth mode: when plugging the earphone (including blue-tooth earphone), you can answer a call by pressing the key on the earphone. If you are not convenient to press the key, please turn on the auto-answer mode (only in earphone mode) and make sure your earphone is plugged. Then your phone auto answers the call 5 seconds after ringing or vibrating.

3.7 Operations in a Call

Press **Options** to perform following operation during a call:

Hold Single Line:	Hold this call
End Single Line:	Hang up and end current call
New Call*:	Enter a new dialing display to make a new call
Phonebook:	Enter the phone book
Call History:	Enter Call history
Messaging:	Enter messages
Sound Recorder:	Recording the calling contents
Mute:	Set mute on or off. When setting mute on, your voice can not be heard through the line.
Swap*:	Switch between the current call and the holding call.
DTMF:	Set dual-tone multi-frequency (DTMF) on or off.

Note: the menus marked with * must be supported by your SIM card. Please contact your service provider for details. Only when two or more calls are on can **Swap** and **Conference** show.

3.8 Insert International Access Code

When you are dialing an international call, keep press **star key** * till the international call prefix

“+” shows and then enter the number in the following order:

+ Country code→ complete number→ dial key

3.9 Dial a Extension or Voicemail Number

Please enter **P (pause)** or **W (wait)** when dialing an extension number, press **star key *** to switch between “**P**” and “**W**”. Enter numbers according to the following order:

District code→ exchange phone number→ P or W→ extension number→ dial key

3.10 Emergency Calls

You can make emergency calls as long as your current location is network-covered. You can know by checking the signal strength bar showing on the top left corner of the screen.






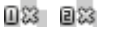 
Note: Emergency numbers varies by country. The emergency number(s) in your phone may not work in all locations, and sometimes an emergency call cannot be made due to network, environmental, or interference influences.









4. Basic





4.1 Display

The idle shows when you turn your phone on:

Icon area

	Signal Strength
 	<p>The vertical bars show the network connection strength: SIM 1 has signal; SIM 2 is unused or no signal; SIM 1 is unused or no signal; SIM 2 has signal.</p>
 	<p>If you do not insert one SIM card, then you will have the unused SIM card shown as disable icon. SIM 1 has been inserted while SIM 2 not; SIM 2 has been inserted while SIM 1 not.</p>
 	<p>Enter Settings and set the mode of single SIM, you will have the unused SIM card shown as disabled icon. SIM 1 and SIM 2 are both open. SIM 1 is unused; SIM 2 is unused.</p>

	<p>New SMS</p> <p>This icon shows when you receive a new message.</p> <p>SIM Card 1 has an unread message; SIM Card 2 has an unread message.</p> <p>Full Inbox</p> <p>This icon flickers when the inbox is full and you need to delete old messages for receiving new messages.</p>
	<p>New MMS</p> <p>This icon shows when you receive a new message.</p> <p>SIM Card 1 has an unread MMS; SIM Card 2 has an unread MMS.</p>
	<p>Turn on Alarm Clock</p> <p>This icon shows when the alarm is on.</p>
	<p>Earphone</p> <p>This icon shows after plugging the earphone in. Voice will be heard from the earphone.</p>
	<p>Ring Mode</p> <p>Your current ring mode:</p> <ul style="list-style-type: none"> Ring Vibration only Vibrate and ring Vibrate then ring Silent
	<p>Missed calls</p> <p>This icon shows when you are viewing the missed call.</p> <p>SIM Card 1 has a missed call; SIM Card 2 has a missed call.</p>
	<p>Call Transfer</p> <p>This icon shows when you transfer all calls.</p> <p>SIM Card 1 has set up all call transfer; SIM Card 2 has set up all call transfer.</p>
	<p>Keypad Lock</p> <p>Different icons show different status of your keypad.</p> <p>Keypad unlocked ----currently the keypad is at unlocked status.</p>

	Keypad locked --- currently the keypad is at locked status, thus no operation can be made.
	GPRS The icon shows when your SIM card has been connected to GPRS. SIM Card 1 has been connected to GPRS; SIM Card 2 has been connected to GPRS.
	Roaming This icon shows when your phone is at roaming status. SIM Card 1 is roaming; SIM Card 2 is roaming.
	Bluetooth This icon shows when the Bluetooth is active.
	Battery Capacity This icon's color shows the status of battery capacity.

Text Area

Name of Service Provider	Statuses of two SIM cards are shown on the screen, including the name of service provider for the card currently-used. If there is one SIM card not being used, then its symbol will be shown crossed on the top of screen. If there are two SIM cards not being used, you will have Emergency Call shown he screen for getting access to emergency call only.
Owner Number	Shows SIM 1 owner number

Shortcut Icons

There are icons of shortcuts shown in the bottom and left side of the screen. Enter the first shortcut icon at the bottom, you will have **File Manager**, **Phonebook**, **Funs & Games**, **Call Center**, **Messaging**, **Multimedia**, **Organizer**, **Settings**, **User Profiles**, **Extra**, **Services**, **Shortcuts**, etc. You can also enter **Options** of **Shortcuts** to **Add** or **Delete All** for hiding or showing shortcut icons.

4.4 Keypad Lock

Press Setting → Security- Auto keypad lock for locking the phone. There will be a icon of keypad shown on the top of the screen. Press “Unlock” → “*” can be used for unlocking

phone.

4.5 Password

The password of your phone is originally set to be **1122**. You can change it whenever you like. Your SIM card password or barred dial password can be also changed. Please contact your service provider for the details.

Note: Please contact your service provider for details.

5. Functions

MB-D1000 offers you a series of functions shown below:

1 File Manager

2 Phonebook

- 2-1 Add New Contact
- 2-2 Options
 - 2-2-1 View
 - 2-2-2 Edit
 - 2-2-3 Delete
 - 2-2-4 Copy
 - 2-2-5 Phonebook Settings

3 Call Center

- 3-1 Call History
 - 3-1-1 SIM 1 History
 - 3-1-2 SIM 2 History
- 3-2 Call Settings
 - 3-2-1 SIM 1 Call Settings
 - 3-2-2 SIM 2 Call Settings
 - 3-2-3 Advanced Settings

4 User Profiles

- 4-1 General
- 4-2 Meeting
- 4-3 Outdoor
- 4-4 Indoor
- 4-5 My style

5 Messaging

- 5-1 Write Message
- 5-2 Inbox
- 5-3 Drafts
- 5-4 Outbox
- 5-5 Sent messages
- 5-6 Delete messages
- 5-7 Broadcast Message
- 5-8 Message settings

6 Multimedia

- 6-1 Camera
- 6-2 Image Viewer
- 6-3 Video Recorder
- 6-4 Video Player
- 6-5 Audio Player
- 6-6 Sound Recorder
- 6-6 FM Radio

7 Organizer

- 7-1 Calendar
- 7-2 Tasks
- 7-3 Alarm
- 7-4 Calculator
- 7-5 Fun & Game
- 7-6 Service

8 Settings

- 8-1 Dual SIM switch
- 8-2 Dual SIM setting
- 8-3 Phone Settings
- 8-4 Network Settings
- 8-5 Security Settings
- 8-6 Connectivity
- 8-7 Restore Factory Settings

Note: Contents of STK are subject to different service providers. When two SIM cards are used at the same time, two STK menus may both be shown according to the type of SIM card.

6. File Manager

Choose **File manager** and enter different storages such as **Phone** and **Memory Card**.

✧ Storage devices: press **Options** to perform following operations

Open	List all the folders and files
Format	Format the storage devices, the operation will delete all the data stored in the storage devices

✧ Folders : press **Options** to perform following operations

Open	List all files in this folder
New Folder	Create a new folder and edit its name
Rename	Change the folder's name
Delete	Delete the folder
Sort by	Arrange the orders of files by Name, Type, Time, Size or None .

✧ As for Files: press **Options** to perform following operations

Play	Play multimedia file in this menu.
Send	Send the file as multimedia message, as Email, and you can also send via blue tooth.
Use as	Use as user profiles.
New Folder	Create new folder
Rename	Edit the file's name
Delete	Delete this file
Sort by	Arrange the orders of files by Name, Type, Time, Size or None .
Mark Several	You can Unmark, Unmark All, Delete Marked, Copy Marked, Move Marked and Send Marked Via Bluetooth .
Copy	Copy this file to any other folder in the same storage.
Move	Move this file to any other folder in the same storage.
Delete All Files	Delete all file in the same storage.
Details	Shows the date and size of the file.

Note: The options may differ depending on the object types.

7. Phonebook

Select **Phonebook** from the main menu for entering the phone book.

The phone book consists of phone storage and SIM card storage for you to use.

Select **Add New Contact**, and enter **Options** for the following operations:

Select:

To SIM 1/To SIM 2: You can add a **Name** and one **Number** in SIM card storage. The capacity depends on your SIM card type. For details, please contact your service provider.

To Phone: You can edit **Name, Number, Caller Ring Tone**

Phonebook Settings:

Select any contact number, enter **Options** for the following operations:

Call	Call Current number
IP Dial	IP dial current contact person
View	View current contact information
Send Text Message	Send text message to current contact number
Send Multimedia Information	Send Multimedia Information to current contact number

Edit	Edit current contact information
Delete	Delete current contact information
Copy	Copy current contact information To Phone , To SIM 1 , To SIM 2 or To File .
Move	Move current contact information From SIM 1 to Phone or From SIM 1 to SIM 2 ; Move current contact information From SIM 2 to Phone or From SIM 2 to SIM 1 .
Phonebook Settings	This phone provides you Speed Dial , My Number , VCard Version , Extra Numbers , Memory Status , Copy Contacts , Move Contacts , Delete All Contacts .

8. Call Center

Enter the main menu **Call Center**, You can get access to **Call History** and **Call Settings**.

8.1 Call History

After entering the menu, select **SIM 1 Call History** or **SIM 2 Call History**, relevant details will be listed. Your phone keeps lists of missed calls, dialed calls and received calls. Calls are listed in the order from new to old.

Note: The phone keeps the only latest call of the same number.

1. Find the lists of **Dialed Calls**, **Received Calls**, **Missed Calls**
2. Press Confirmation key to view the details such as date and time.
3. press **Options** to perform following operation:

View	View the details of missed calls/ received calls and missed calls.
Call	Call the current number
Send Text Message	Send text message to current number
Send Multimedia Message	Send multimedia message to current number
Save to Phonebook	Save current number to phonebook
Add to Blacklist	Add current number to blacklist
Edit Before Call	Edit current number before call
Delete	Delete current call record

Delete Call Log

You can delete the all the records of the missed calls, dialed calls and answered calls, you can also choose Delete All to delete all the three records.

Call Timer

You can check the call time record of the phone up to now through this menu.

Last Call	Show the last call time
Dialed Calls	Show the dialed calls time
Received Calls	Show the answered calls time
Reset All	Reset the last call time, total inbound time and outbound time

Call Cost

You can check the call charge of the phone up to now through the menu.

Last Call Cost	Check the last time call cost.
Total Cost	Check all the calls' cost.
Reset Cost	Input the PIN2 code, and then can cleanup all the cost.
Max Cost	Show the limitation of the currently cost, "0" means no limit.
Price per Unit	Press setting to setup the unit time rates.

Note: The call cost function must be supported by the network service provider. You need to input the PIN2 code to reset the cost, setup the maximum cost and rates. Please contact your network provider for the password.

Text message Counter

You can check the number of the sent and received SMS currently. Press **Reset** to clear the selected records.

GPRS Counter

You can check the transmission flow when use the **GPRS Counter**, including checking the data flow of **Last Sent**, **Last Received**, **All Sent** and **All Received**. You can also reset the records through **Reset Counter**.

8.2 Call Settings

You can perform following operations through this menu. You should select call settings for SIM 1 or SIM 2 before entering the corresponding menu.

Caller ID	You can set caller ID by network, and you can hide or send ID here.
Call Waiting	Set the call waiting function.
Call Divert	Set the call divert function.
Call Barring	Set the call barring function.
Line Switching	There are 2 lines available. You can witch to your current line.

Advanced Settings

Auto Redial

When you make this function on, then the number you called will be redialed automatically if not being answered.

IP Dial

This phone enables you to set 3 groups of IP numbers. After activating one group of IP numbers, you may select IP dialing. Then the phone will compose IP dialing automatically in front of the number you want to dial.

You can enter **Activate SIM1 Call** for activating and the current number will become IP number of SIM Card 1. You can also enter **Activate SIM2 Call** to activate SIM 2 number and make it become IP number. **Edit** function is for editing current IP number.

Call Time Display	Turn on/off the display function for call
Call Time Reminder	Remind user for the call time. This function can be turned off and be set as once reminder or circular reminder.
Answer mode	Select the answer mode: Any key, auto answer when headset mode

9. Messaging

You can receive and send messages, MMS, Multimedia Information, include pictures, music and text. You can also use broadcast messages and voice mail box based on web service. Please contact the provider for the web service.

Instant message make it possible for you to exchange messages with other wireless phone users. Enter main menu from the idle interface and select **Messaging** for your operation.

9.1 Write Message

You can write a new text message and insert template in your message.

Select send Text message, MMS

Write Text message

Press **Options** and you will have the following information:

Send to	Send the message to the phone number you need. You can enter number or add from phonebook.
Input Method	There are 12 kinds of input method for you to select.
Advanced	You can insert number, name and bookmark in your message.
Save to Drafts	You can save the current message to drafts.

After entering a number or adding from phonebook, you will have the following options:

Send	You can send messages after writing.
Edit Recipient	You can edit the recipient here.
Remove Recipient	You can remove the recipient here.
Remove All Recipients	You can remove all recipients here.
Save to Drafts	You can save the current message to Drafts .

Write MMS

Edit the information for **TO**, **CC**, and **BCC**,

Add Number	Add telephone number of MMS recipient
Add Email	Add Email address of MMS recipient
Edit	Edit current selected recipient
Delete	Delete current telephone number from recipient list

Edit **subject** and click **Options**:

Done	Confirm the current finished contents
Cancel	Exit from the current unsaved contents
Input Method	Select the input method you want

Edit **Content** and click **Options**:

Done	Confirm the current finished contents
Input Method	Select the input method you want
Add Picture	Add picture in current MMS
Add Audio	Add audio file in current MMS
Add Attachment	Add attachment in current MMS
Add Slide Before	Add slide before current page of MMS
Add Slide After	Add slide after current page of MMS
Add bookmark Text	Add URL link in you MMS
Preview	Preview the contents of current MMS

Slide Time Adjusting the slide time between current and next page of MMS

Click **Done** and perform the following operations:

Send only	Send current MMS
Save and Send	Save and sent current MMS
Save to Draft	Save current MMS to Draft
Send Options	You can adjust the contents of Validity Period , Delivery Report , Read Report and Priority .
Exit	Withdraw the editing interface and do not save the message.

9.2 Inbox

Inbox is for storing received messages. When you receive a new message, your screen will show the icon of new message. Your phone vibrates or rings according to your selected mode. The icon of new message shows on the top of the status bar till you read the new message.

Select **SIM 1 Inbox** or **SIM 2 Inbox** for performing the following operations:

Reply	Reply a message to the current sender
Call Sender	Call senders of current message
Forward	Forward this message to others
Delete	Delete this message
Delete All	Delete all messages in the inbox
Mark Several	You can delete messages, copy to phone , move to phone , unmark , Mark all or unmark all messages.
Advanced	You can use number , URL , Email , copy to phone , move to phone , copy all and move all .

Note: Message icons keep flickering when you inbox is full in idle interface. Please delete some messages for ensuring you to receive new messages.

9.3 Drafts

Select **SIM 1 Drafts** or **SIM 2 Drafts** to view the draft messages you stored. And you can perform the following operations:

Send	Send a message to the sender
Edit	Edit current message
Delete	Delete current message

Delete All	Delete all the messages in the Drafts
Mark Several	You can delete messages, copy to phone , move to phone , unmark , Mark all or unmark all messages.
Advanced	You can use number , URL , Email , copy to phone , move to phone , copy all and move all .

9.4 Outbox

Select **SIM 1 Outbox** or **SIM 2 Outbox** to view the outbox messages you stored. And you can perform the following operations:

Resend	Resend current message to others.
Edit	Edit Current message.
Delete	Delete this message
Delete All	Delete all messages in the inbox
Mark Several	You can delete messages, copy to phone , move to phone , unmark , Mark all or unmark all messages.
Advanced	You can use number , URL , Email , copy to phone , move to phone , copy all and move all .

9.5 Sent messages

Store the sent message

9.6 Delete messages

Delete messages

9.7. Broadcast Message

Broadcast messages are sent from network operator to GSM phone users, such as weather forecast, traffic reports, stock market updates, etc. Every kind of mobile broadcast has a fixed model number. Mobile phone can automatically store broadcast message when you receive from a new channel. New broadcast message covers the old one if they are from the same channel.

After entering **Broadcast Message**, you need to select **SIM 1 Broadcast Message/ SIM 2 Broadcast Message** and perform the following operations:

Receive Mode:	Select the status of the broadcast message (on or off)
Read Message:	Read the broadcast messages
Languages:	Set the language of the broadcast messages

Channel Settings: Set the broadcast messages channels

Note: This function must be supported by network. Please contact your network provider for more information.

9.8 Message Settings

SMS settings

After entering **SMS Settings**, you need to select **SIM 1 Message Settings/ SIM 2 Message Settings** and perform the following operations:

Profile Settings:	There are four profiles for editing.
Voicemail Server	Create voicemail information, including Name and Number .
Common Settings	Tick Delivery Report , Reply Path , Save Sent Message for activate the functions.
Memory Status:	Check the capacity of messages storage
Preferred Storage:	Set the default message storage location, including storage in phone and SIM card.

MMS Settings

Enter Message Settings, you will have:

Profiles	Select the name of service provider, or Add new .
Common Settings	You can Compose , Send , Retrieve , Filter , Memory Status .

Following are the details for **Common Settings**:

Compose	Include Creation Mode , Picture Resizing , Best Page Time , Auto Signature , Signature , etc.
Send	Include Validity Period , Delivery Report , Read Report , Priority , Slide Time , etc.
Retrieve	Include Home Network , Roaming , Read Report , Delivery Report , etc.
Filter	Include Anonymous and Advertisement .
Memory Status	View the storage of the MMS.

Note: If your MMS can not be sent successfully, please reset the corresponding settings of MMS. The route is: **MMS Settings**→ **Profiles**→ Please select the name of your SIM service provider→ **Options**→ **Activate**.

Note: you need support from the service provider to receive delivery reports.

10. Multimedia

Your phone offers multimedia applications and you can use **Multimedia** from main menu to open it.

10.1 Camera

Your phone has a high-Mega pixel camera for taking photos whenever and wherever you like. After taking photos, store them in the phone memory or memory card (if being inserted).

Camera Settings

Press **Options** in viewfinder display and make detailed settings:

Photos	View Pictures stored in the file.
Camera Settings	Select LED Highlight , Shutter Sound , EV , Contrast , Anti-Flicker , Delay Timer or Cont. Shot .
Image Settings	Adjust Image Size and Image Quality .
White Balance	Select Auto , Daylight , Tungsten , Fluorescent , Cloudy or Incandescent , etc.
Scene Mode	Select night or auto mode
Effect Settings	Select Normal , Grayscale , Sepia , Sepia Green , Sepia Blue or Color Invert .
Flash	Make flash on or off.
Storage	Select your preferred storage in Phone or Memory Card .
Restore Default	Use the default settings

Take a Photo

At camera viewfinder status, please take the scene which is shown in the picture frame, press **Confirmation key** for taking a photo.

After photo being taken, the phone saves automatically. You can select **Send** or **Delete** and then back to the viewfinder.

Note: All the photos are stored in the photos file.

10.2 Image Viewer

You can view the photos in this menu. All the photos related will be shown once you perform this function.

View	View the image files supported by the phone. If the file is not supported by the phone, then you will be prompted format error.
Browse Style	Select from List Style or Matrix Style .
Send	Send the file As Multimedia Message , As Email or Via Blue tooth .
Use as	Use as Wallpaper , Screen Saver , Power on Display , Power off Display or Caller Picture .
Rename	Edit the name of the file
Delete	Delete current file
Sort by	Arrange the orders of files by Name , Type , Time , Size or None .
Delete All Files	Delete all files in the image viewer.
Storage	Set the storage of reading file: Memory Card or Phone .

10.3 Video Recorder

Choose **Video Player**, the phone will be at video taking status. Press **Options** in viewfinder display and make detailed settings:

Camcorder	
Settings	Select EV , Anti-Flicker or Night Mode .
Video Settings	Select Video Quality , Size Limit Reached , Time Limit Reached or Record Audio on & off.
White Balance	Select Auto , Daylight , Tungsten , Fluorescent , Cloudy or Incandescent , etc.
Effect Settings	Select Normal , Grayscale , Sepia , Sepia Green , Sepia Blue or Color Invert .
Storage	Select your preferred storage in Phone or Memory Card .
Restore Default	Use the default settings

Taking Video

Please press the **Confirmation** key for starting taking video. Press the key again, then video player pauses, please press **Stop** icon for stopping recording. You can save the file recorded by click **Yes** or **No**.

Note: Files recorded are stored in press the file-case named **video**.

10.4 Media Player


Select **Media Player** for checking movies stored in media player. Click **Options** for playing, sending, renaming, deleting, all deleting and sorting.


Now Playing


Enter **Now Playing**,

Click  Play current songs or movie,

Click  and pause current playing,

Click  and pause playing,


Click  for previous songs,

Click  for next songs.

Click  for full screen play.

Adjust voice volume via **+** or **-**.

Click  for shifts from all repeat, single repeat or non-repeat.

Click  for selecting sequence playing or random playing.

Enter **Audio**, please click **Options** and enter the following settings:

Current Play List	Shows all files in the current play list.
Settings	Make settings for media player in Player Settings , Audio Settings or Bluetooth Settings .
Details	Select File Name , Title , Artist , Album , Genre , Description , Year , Track Number , Duration , Size , Quality , Channel or Location for viewing the corresponding details.
Video Recorder	Start using video recorder.

My Play List



You can add and play your movie or songs in **My Play List**.

Enter **Video**, select **Open**→ **Options**

Play	Play current movie or song.
Details	Select File Name , Title , Duration , Size , Quality , Channel or Location for viewing the corresponding details.
Add	Add file from Phone or Memory Card .
Remove	Remove current file from the list.

Send	Send current file as multimedia message, email. And you can send via Bluetooth.
Use as	Use the current file in your user profiles.
Move up /move down	Adjust the order of video files in My Playlist

10.5 Sound Recorder

Enter **Sound Recorder**, click  for recording. Click  for pause the recording. Click **Continue** for continue recording. After the recording, click **Stop** for stopping the recording and enter the interface for saving. Press **Yes** to save the sound file. Press **No** to go back.

Click  for playing records in the list. Click  for entering previous record. Click  for entering next record.

Click **Options** and you can make the following operations:

✧ **New Record**

Begin to make a new record of sound.

✧ **Play**

Play the selected sound file.

✧ **Append**

For files in AMR format, you can add a new sound recording onto the original one and then save them.

Tip: **Append** is not available for files in other format.

✧ **Rename**

Change the name of the current sound file.

✧ **Delete**

Delete the current sound file.

✧ **List**

Enter the list of sound recorder.

✧ **Settings**

Set up Storage and File Format.

✧ **Delete All Files**

Delete all the sound files.

✧ **Use as**

Send the current sound file to user profiles.

✧ **Send**

Send the current sound file to user profile, MMS or Bluetooth.

10.6 FM Radio

Choose **FM Radio** and plug in earphone for turning on FM Radio.

Enter **Options** and you can make the following operations:

Channel List	There are 20 channels for you to store.
Manual Input	Inputs the FM frequency you prefer.
Auto Search	Makes auto search for channels available and add them into the channel list for you to select.
Settings	You can make settings for Loud Speaker , Record Format , Audio Quality and Record Storage .
Record	You can make record for current radio contents
Append	You can add radio record to your sound file and then save them.
File List	File list stores the radio records saved.

Note: Auto search needs some time, so please be patient.

Basic Usage

The phone offers you the FM Radio background play function. Enter **Settings** and turn on background play. If you want to turn on the radio, please plug in earphone first before entering the interface of **FM Radio**. If you want to turn off the radio, unplug the earphone first and then press **Back** in FM interface for exit.

Tips: When listen to the FM Radio, you can make or answer a call normally. While talking, the volume of the broadcast will into mute automatically.

11. Organizer

This phone has more organizers, such as calculator.

11.1 Calendar

The screen shows current date framed by special color box when entering **Calendar**. Press the 4-ways navigation key up, down, left or right to move to different date. Press Confirmation key or stylus to enter the corresponding menu. You can use the functions of **View**, **View All**, **Add T Event**, **Delete Event**, **Jump to Date** and **Go to Weekly View**.

11.2 Tasks

Enter **Tasks** and select **Add** for selecting **Date**, **Call** and **Anniversary** according to your different needs. Then edit time, subject, alarm time, repeat, location, priority, details, status, etc.

View

View the content of selected task

Add

Select Add to create a new task. You can edit its date, time, note, alarm mode and reminding mode etc.

Edit

Edit the content of selected task

Delete

Delete current **Tasks** contents

Delete Overdue

Delete overdue Tasks.

Delete All

Delete all the tasks

Jump to Date

Jump to specific date to view tasks.

View Uncompleted

Send vCalendar

Send vCalendar by SMS, Bluetooth or save as file.

Save as File

Save current tasks as file in phone or memory card.

Note: There is fixed space for storing tasks. If no **Add** shows in **Options**, please delete some tasks for saving spaces for more tasks.

11.3 Alarm

The phone has an alarm clock with 5 separate alarms that you can set to alert you at the time(s) you specify. To set an alarm clock, select one alarm and edit its **on/off**, **Repeat**, **Alarm Tone**, **Snooze (mins)** and **Alert Type**.

11.4 Calculator

Enter **Calculator** menu, then you can make simple calculating.

11.5 Service

Enter from the menu of **Services**→ **Internet Service**, you can connect to the Internet or run web-based applications by using web browser. Please consult your service provider for linking to the network.

Note: Your phone is applicable to the GPRS (General Packet FM Radio Service) network link. Type of the network link depends on your network service provider. This function must be supported by network. For more information about this please contact your network provider.

Home

Selecting the main menu, you can log on the homepage set up to browse. If you do not set up, you can use the website pre-set by the manufacturer.

Bookmarks

Enter **Bookmark**, select the **Options** button, you can do the following operations to the bookmark selected:

Go to	Link the website appointed by the bookmark.
Edit	Edit the name and address of the current bookmark.
Send	Send the address of the bookmark as text message, multimedia message or Email.
Delete	Delete bookmarks.
Delete All	Delete all the information of bookmarks.
Add Bookmark	Add new name and address of the bookmark.

Recent Pages

The menu lists the website records recently visited and facilitate your visit to the site.

Input Address

Enter the menu, after inputting the URL address of the WAP service that you want to visit, select the **option** button and select complete. The phone automatically logs on the website you input.

Service Inbox

You can check the web service message in this mailbox, and can also process delete etc.

Settings

You can select **settings** menu, then set up the content relates to the WAP service as following:

Select SIM	Select use SIM card in the internet.
Profile	Select and start the network configuration file you need, can set up

	homepage, account and login password etc.
Browser Options	Waiting time of viewing the website and figures shown.
Service Message Settings	Turn on/off the reception of the service news.
Clear Cache	Use to clear the records in the cache.
Clear Cookies	Use to clear personal writing data.

12 Settings

You can set your favorite wallpaper, ring tone or some other functions via **Settings**.

12.1 Dual SIM Settings

This menu offer several usages of dual SIM cards for you to choose the mode you want.

Dual SIM open	Both dual SIM are standby
Only SIM 1 open	Only use SIM 1 standby
Only SIM 2 open	Only use SIM 2 standby
Flight Mode	The whole function related to calls are all closed at the status of flight mode.

12.2 Dual SIM switch

Manually selected by user
Automatically decide by SIMcards

12.3 Phone Settings

Enter **Settings** from main menu, select **Phone Settings** and then you can set the following items:

Time and Date	Set your current time zone, time, date and their display format.
Schedule	You can set up to 4 time points to automatically turn the phone on and off.
Power On/Off	
Language	Set the display language.
Preferred	
Input Methods	Select the preferred input method as you like.
	You can find submenus such as wallpaper, screen saver, power on

Display	display, and power off display, back light timer, show date and time, show owner number, show operator name in display characteristic.
Dedicated Key	You can set list of dedicated key according to your need.
Flight mode	Switch on/off this function for flight mode
Misc.setting	Set the LCD backlight time you need for the screen.

12.4 Network Settings

Enter **Settings** from main menu, select **Network Settings**, you need to choose the SIM card network setup for SIM 1/SIM 2 and then you can perform following operations:

Network Selection	New search, Select Network, Selection Mode
Preferences	Set the preferred network during searching.

12.5 Security Settings

Enter **Settings** from main menu, select **Security Settings** and then you can perform following operation:

SIM 1 security Settings	You can set SIM lock (PIN code), fixed dial, barred dial and change password for SIM 1.
SIM 2 security Settings	You can set SIM lock (PIN code), fixed dial, barred dial and change password for SIM 2.
Phone Lock	Set a password for phone lock and the default password is 0000 .
Auto Keypad Lock	Set auto keypad locked on or off and the interval time for keypad lock.
Change Password	Change the phone lock password.

Note: As for the Password, please contact your service provider for details. Fixed Dial and Barred Dial must be supported by your SIM card. Please contact your service provider for detail.

12.6 Connectivity

Bluetooth

The phone provides Bluetooth function. Enter **Bluetooth** and make operations as followings:

Power

Select to turn on/off the blue tooth device, you must turn on the Bluetooth Device of the phone before using it.

Visibility

You can turn on or off for **Visibility** for inquire the blue tooth device.

My Device

You can **Search New Device** via blue tooth. The menu will list all blue tooth devices that you inquired. You can select the device you need via the operations of **Transfer Files, Service List, Rename, Delete, Delete All**, etc.

Search Audio Device

Blue tooth device will be searched with your phone. And you can **Pair** them.

My Name

You can check the name, address, supported service of blue tooth device in the menu.

Advanced

Please make sure the blue tooth device is power on before inquiry. You can make operations in **Audio Path, Storage, Sharing Permission, Remote Control** and **My Address**.

Data Account

There are names of GPRS service providers listed in **Data Account**. You can **Add, Edit** or **Delete** according to your needs.

12.7 Restore Factory Settings

Enter **Settings** from main menu, select **Restore Factory Settings** and restore initialized settings for wallpaper, screen saver, ring tone, etc. The password : "1122"

12.8 Sound Effects

You can have different sound effects though this menu, such as **Off** and **Equalizer**.

13. User profiles

Enter **Settings-- User profiles** from main menu and there are several profiles that you can edit the following contents as you like: **General, Meeting, Outdoor, Indoor, my style**. Once you connect your phone with an earphone or a blue tooth device, the **Headset** and **Bluetooth** are automatically activated and meanwhile the other profile is deactivated.

You can choose any profile as you like and customize the selected one:

Tone Settings: Set the incoming call tone, incoming message tone and keypad tone

Volume: Set the volume of ring tone and key tone

Alert Type: Set **Ring Only, Vib. Only, Vib. and Ring, Vib. then Ring, Silent**

Ring Type: Set **Single, Repeat** or **Ascending**

Extra Tone: Set warning ring and error ring on or off

Answer Mode: Set pressing any key to answer except power on/off key, right soft key and #

pound key. Set auto answer on or off (only in Headset Mode).

Specific Absorption Rate Data

This model meets international guidelines for exposure to FM Radio waves.

Your mobile device is a FM Radio transmitter and receiver. It is designed not to exceed the limits for exposure to FM Radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobiles devices used by the general public is 2 W/kg.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

New phones must meet the international guidelines before coming into the market. The highest SAR value for this device when tested at the ear was **0.85** W/kg and the highest tested SAR value is **0.44** W/kg.

Information from the World Health Organization

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of SAR Data mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body. Improvement of this device may cause a little change of the SAR data. However, the device is designed in accordance with the guidelines in any case.

Battery Tips

- The machine is provided by the reusable rechargeable battery.
- The new battery only can by two or three times full charge and discharge cycle to achieve optimum performance.
- Battery can be recharged many times for repeated use, but it will eventually be exhausted. When the talk and standby time is significantly shorter than usual, then need to replace a new battery.
- Use the battery the handset manufacturers approved only, and use the authorized charger for the battery charge only.
- Cut off the power supply when do not use the charger.
- Do not connect a battery to a charger more than one week, the long time charge will affect battery life.
- The battery storage for too long would affect the results. And the battery will automatically discharge as long time unused.
- Do not use a damaged battery or charger.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F).
- Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.
- Do not let the batteries short-circuit. When metal objects (such as: coins, etc.) directly connected to the battery anode and the cathode (with the metal side), will occur short-circuit accident. In the pocket or handbag carry a spare battery should be particularly careful. Short-circuit will damage the battery.
- Please deal with the waste batteries according to the relevant provisions.
- Never dispose of batteries in a fire because they may explode.

Product Maintenance

Your phone is a product with outstanding design and superior quality, please take good care using it. You are strongly suggested to take the following advice which should help you stick to the warranty in order to extend the usage period of the product.

- Keep your phone and its parts away from children.
- Keep your phone dry. Keep it away from rain, damp or any kind of fluid.
- Don't touch your phone with wet hands when charging or there may be bodily injury or damage to the phone.
- Keep your phone away from extreme heat which can shorten your phone's life, damage the battery, twist or melt some plastic parts.
- Keep your phone away from extreme cold because when the temperature grows up, water vapor accumulated from inside the phone may damage the electronic circuit.
- Keep your phone away from dust and dirt.
- Keep your phone away from ignited cigarettes, fire or heat source.
- Don't disassemble your phone by yourself.
- Don't drop, beat or shake your phone. Any rude treatment can damage the inner electronic circuit board.
- Don't daub your phone because paint would jam-up the earpiece, microphone or any other removable part and disable your phone.
- Clean the pc camera or screen with neat, soft and dry cloth. Don't use alcohol or other cleaning solutions.
- If your phone, battery, charger or parts can't work, please take them to the authorized service center for help.

Konformitätserklärung

Wir, Hyundai Technologies Handels GmbH, A-1230 Wien,
Grossmarktstrasse 22/1

erklären in alleiniger Verantwortung, das das Produkt MB-D1000 alle
essenziellen Anforderungen der R&TTE Direktive 1999/5/EC erfüllt.

EN 60950-1:2006 + A11: 2009

EN 50371: 2002

EN 50360: 2001

EN 62209-1: 2006

EN 62311: 2008

EN 62209-2: 2010

EN 301 511 V9.0.2 (2003-03)

EN 301 489-1 V1.8.1 (2008-04)

EN 301 489-7 V1.3.1 (2005-11)

EN 301 489-34 V1.1.1

EN 301 489-17 V2.1.1

EN 300 328 V1.7.1

CE 0700

EU Direktive 1999/5/EU

Wien, 21.09.2011



Christian Kirchner, Managing Direktor

(Name, Unterschrift des Verantwortlichen)