


Hyundai Video Pen VP 02 HD8

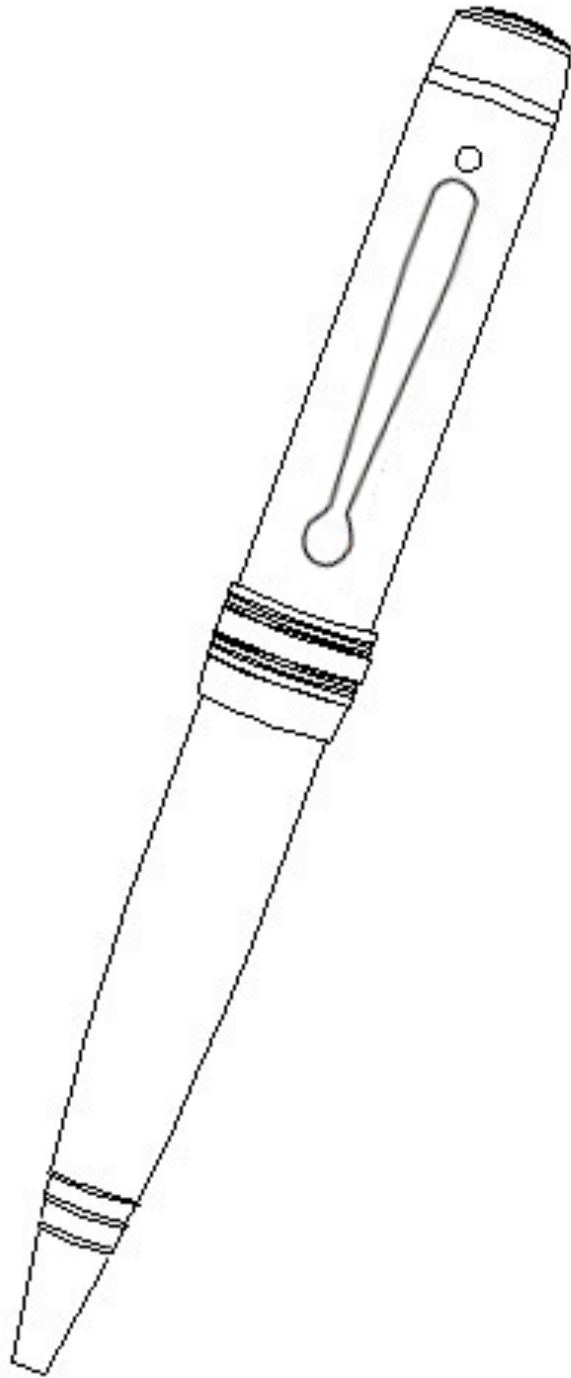

Remark: This picture only for reference

一、 Important notes at the beginning


- a. This manual is designed to familiarise you with the operation of this product. Keep these instructions so you can refer to them at any time.
- b. Please only use the product in its intended manner. Any other use may lead to damage of the product or the connected devices.
- c. Reconstruction or modification of the product affects the safety of the product. Caution: Risk of injury!
- d. Handle the product carefully. It can be damaged by impacts, shock or falling, even from a low height.
- e. Keep the product away from moisture and extreme heat.
- f. Never immerse the product in water or other liquids.

1 Disposal

This electric device does not belong in the household rubbish. For proper disposal, please contact the local public waste collection in your community.

Insert CE and crossed through waste bin

2 Product Details

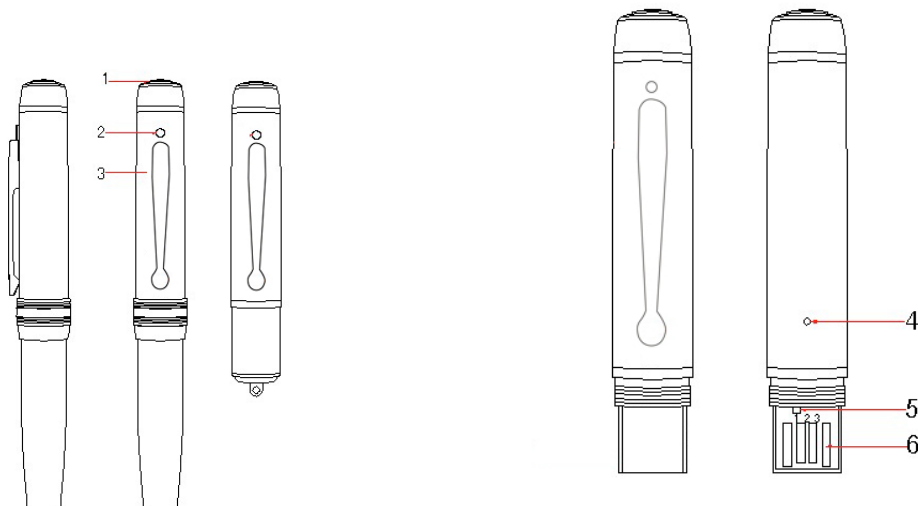

NO	Name	Description
1	Operation key	It's a multi-functional key with different functions in different modes and states, including power-on, power-off, start to record video, stop recording video, take photos, start to record audio and stop recording audio.
2	Camera lens	Used to catch image signals
3	Mic	Used to catch the audio signals
4	Indicator lamps	There are three built-in red, green and blue indicator lamps, three lamps in three colors may indicate the different operating states of products in different combination modes.
5	Mode Switch	“①” Reset
		“②” Video
		“③” Picture, Audio
6	Standard 4 Pin USB	The interface for connecting the data line and power cord

3 Usage

2. Startup and Power-off:

1.1 Startup

- Keep the Mode Switch in ②, Press OPERATION KEY (part 1) for 1second and then release it.
- The power of product is turned on, the GREEN and RED lamp will turn on and the product will enter into the initialization status.
- The GREEN lamp will turn off when the initialization is completed.
- After startup, the device will enter into the default recording function standby status and the RED lamp will turn on.
- Startup is completed.

Note: The startup of this machine is similar to that of computer with a startup course, never make any operation during this course till the startup is completed. The time duration of startup initialization depends on the capacity of memory.

1.2 Power-off

- a. Press OPERATION KEY (part 1) for 4 seconds and then release it.
- b. The status indicator lamps will turn off to complete power-off.

Note: If the product is working when you turn off it, The system will automatically save the files being recorded at present and power off.

2、 Video Record

- a. It will enter into the default video record mode after startup or switch over to ② record mode by the mode key.
- b. The RED light will keep on when the device is in standby status of this mode.
- c. Press the OPERATION KEY shortly to start the video record and the RED lamp will turn from constantly ON status to even and slow flicker status.
- d. Press OPERATION KEY shortly again to stop video recording and save the file being recorded, the RED light will turn from flicker status to constantly ON status.

Note: To guarantee the size and safety of the Video and the photography files, the system will automatically save the file once every 30 minutes and continue to record video. Please make sure the camera not being blocked with sufficient illumination, keep the product body vertical and stable, with over 50cm distance with the objects to be recorded to get the images with right direction, natural colors, clear images and stable images. Never block the microphone sound gate to ensure the sound recording effect.

3、 Take Pictures

- a. Switch over the device to ③ mode.
- b. The GREEN light will keep on when the device is in standby status of this mode.
- c. It will take one picture and the GREEN light will flicker once every time the OPERATION KEY is pressed shortly.

4、 Audio Record

- a. Switch over the device to ③ record mode.
- b. The BLUE light will keep on when the device is in standby status of this mode.
- c. Press the OPERATION KEY 2 seconds to start the audio record and the BLUE lamp will turn from constantly ON status to even and slow flicker status.
- d. Press OPERATION KEY shortly again to stop audio recording and save the file being recorded, the BLUE light will turn from flicker status to constantly ON status.

Note: To guarantee the size and safety of photography files, the system will automatically save the file once every 60 minutes and continue to record audio. Never block the microphone sound gate to ensure the sound recording effect.

5、 PC Camera

- a. Keep the Mode Switch in ② , startup

- b. Enter the PC Camera mode, Open MY COMPUTER, the icon of web cam will appear on the screen to indicate that the web cam function of product is started up normally.

Note: Not always that the computer can detect web cam function due to the computer configuration or the system differences. If the product cannot enter into web cam mode, but into the movable disk mode occasionally, please remove this unit, start up this unit and re-connect it to the computer. If you just use the computer web cam function of this machine on your computer for the first time, please install the web cam driver attached to the floppy disk or provided by the distributor, to prevent this product from being damaged, please connect one end of data line to the computer before connecting it to the computer, connect the other end of data line to the computer. Temporarily, the computer web cam function of this unit can only support WINDOWS operating system.

6. Charge

Connect the product to the power adaptor or computer to charge it. The RED light will flicker slowly when the battery is being charged and will keep on when the battery is charged completely.

.) Lithium - Polymer - Rechargeable batteries are sensitive to extreme temperatures. Do not expose the battery to high temperatures. If the battery heats up during operation, allow it to cool before the next charging.

.) The charging process should be executed and supervised by adults. Supervise the charging of the battery and check the temperature regularly. A damaged battery could become very hot.

.) Interrupt the charging process immediately if there is high overheating and replace a defective battery after it has cooled off.

.) In contrast to conventional Ni-Cd batteries, lithium polymer batteries may never be fully discharged. A full or deep discharge can destroy the battery.

.) If the battery will be stored for a longer period without being used, we recommend retaining approx. 30% capacity of the charging volume.

Avoid direct sunlight to the storage location. The ideal temperature is 10 - 20C.

7. Solutions of possible problems when connecting USB Devices

NOTE:

A problem can occur when connecting a USB device to a USB hub or switch and can be caused by either device. Therefore, you should use the following troubleshooting as far as possible for both the USB device itself, as well as for a possible connection device.

The USB device is not recognised

- .) Verify that your computer meets the system requirements for the device.
- .) If, when connecting the USB data medium (e.g. as with a USB stick or a MP3 player), the removable disc window does not open automatically, open "My Computer" (XP) or "Computer" (Vista). Check there (under "Devices with removable storage") if a new removable disk appears.
- .) Disconnect the device from your computer. Start your operating system and connect the device again.
- .) If the device is connected to a USB hub, try connecting it directly to your computer instead.
- .) Unplug the device and connect it directly to the USB port on the back of your PC.
- .) If you use a PCI card with more than one USB port, connect the device directly to one of the USB ports on your motherboard.
- .) Verify that the USB port of your computer works.
- .) Check if the USB port is enabled in the BIOS settings of your computer.
- .) If your BIOS settings have the legacy USB functionality, disable it.
- .) Windows puts connected USB devices on an energy saving mode after prolonged inactivity. Reconnect the device or turn off the power saving feature. To do this, go to "My Computer" and select "Manage". Click on "Device Manager" - "USB Controller" - "USB Root Hub". Select "Power Management" and remove the check mark in the upper field.

www.my-hyundai.de